

Everything's possible.

DigiFlex® Performance™ DPE Drives

EtherCAT® Communication

Hardware Installation Manual



Preface

ADVANCED Motion Controls constantly strives to improve all of its products. We review the information in this document regularly and we welcome any suggestions for improvement. We reserve the right to modify equipment and documentation without prior notice.

For the most recent software, the latest revisions of this manual, and copies of compliance and declarations of conformity, visit the company's website at www.a-m-c.com. Otherwise, contact the company directly at:

ADVANCED Motion Controls • 3805 Calle Tecate Camarillo, CA • 93012-5068 USA

Agency Compliances

The company holds original documents for the following:

- UL 508c, file number E140173
- Electromagnetic Compatibility, EMC Directive - 2014/30/EU
EN61000-6-2:2005
EN61000-6-4:2007/A1:2011
- Electrical Safety, Low Voltage Directive - 2014/35/EU
EN 60204-1:2006/A1:2009
- Reduction of Hazardous Substances (RoHS II), 2011/65/EU
- Functional Safety Type Approved, TUV Rheinland

Trademarks

ADVANCED Motion Controls®, the combined isosceles trapezoid/right triangle logo, **DIGIFLEX®**, **DIGIFLEX® Performance™** and DriveWare® are either registered trademarks or trademarks of *ADVANCED* Motion Controls in the United States and/or other countries. EtherCAT is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany. All other trademarks are the property of their respective owners.

Related Documentation

- Product datasheet specific for your drive, available for download at www.a-m-c.com
- DriveWare Software Guide, available for download at www.a-m-c.com
- EtherCAT Communication Manual, available for download at www.a-m-c.com

Attention Symbols

The following symbols are used throughout this document to draw attention to important operating information, special instructions, and cautionary warnings. The section below outlines the overall directive of each symbol and what type of information the accompanying text is relaying.



Note

Note - Pertinent information that clarifies a process, operation, or ease-of-use preparations regarding the product.



Notice

Notice - Required instruction necessary to ensure successful completion of a task or procedure.



Caution

Caution - Instructs and directs you to avoid damaging equipment.



Warning

Warning - Instructs and directs you to avoid harming yourself.



DANGER

Danger - Presents information you must heed to avoid serious injury or death.

Revision History

Document ID	Revision #	Date	Changes
MNDGDEIN-01	1	11/2011	DPE Install Manual First Release
MNDGDEIN-02	2	9/2012	- Updated for DriveWare 7 information - Updated for RMS Charge-Based Limiting capabilities
MNDGDEIN-03	3	10/2013	- Added C060A400 and C100A400 Power Module Information
MNDGDEIN-04	4	10/2014	- Added STO wiring recommendation
MNDGDEIN-05	5	02/2015	- Added 020B080 Power Module Information
MNDGDEIN-06	6	03/2016	- Added 040A400 Power Module Information
MNDGDEIN-07	7	09/2016	- Added 030A800 and 060A800 Power Module Information
MNDGDEIN-08	8	11/2017	- Added 100B080 Power Module Information

© 2017 **ADVANCED** Motion Controls. All rights reserved.



Contents

1 Safety **1**

1.1 General Safety Overview	1
-----------------------------------	---

2 Products and System Requirements **4**

2.1 DPE Drive Family Overview	4
2.1.1 Drive Datasheet	4
2.2 Products Covered	5
2.2.1 Control Module	7
2.3 Communication Protocol	8
2.4 Control Modes	9
2.4.1 Profile Modes	9
Profile Current (Torque)	9
Profile Velocity	9
Profile Position	9
2.4.2 Cyclic Synchronous Modes	9
Cyclic Synchronous Current	10
Cyclic Synchronous Velocity	10
Cyclic Synchronous Position	10
2.5 Feedback Supported	10
Feedback Polarity	10
2.5.1 Incremental Encoder	10
2.5.2 Absolute Encoder	11
2.5.3 1Vp-p Sin/Cos Encoder	12
2.5.4 Hall Sensors	12
2.5.5 Auxiliary Incremental Encoder	12
2.5.6 Tachometer (± 10 VDC)	13

2.5.7 ± 10 VDC Position	13
2.6 Command Sources	14
2.6.1 ± 10 V Analog	14
2.6.2 Encoder Following	14
2.6.3 Indexing and Sequencing	14
2.6.4 Jogging	14
2.6.5 Over the Network	14
2.7 System Requirements	15
2.7.1 Specifications Check	15
2.7.2 Motor Specifications	15
2.7.3 Power Supply Specifications	16
2.7.4 Environment	17
Shock/Vibrations	17
Ambient Temperature Range and Thermal Data	17

3 Integration in the Servo System

19

3.1 LVD Requirements	19
3.2 CE-EMC Wiring Requirements	20
General	20
Analog Input Drives	20
PWM Input Drives	20
MOSFET Switching Drives	20
IGBT Switching Drives	20
Fitting of AC Power Filters	20
3.2.1 Ferrite Suppression Core Set-up	21
3.2.2 Inductive Filter Cards	21
3.3 Grounding	22
3.4 Wiring	23
3.4.1 Wire Gauge	23
3.4.2 Motor Wires	24
3.4.3 Power Supply Wires	24
3.4.4 Feedback Wires	24
3.4.5 I/O and Signal Wires	25
3.5 Connector Types	26
3.5.1 Power Connectors	26
3.5.2 Feedback Connectors	28
3.5.3 I/O Connectors	29
3.5.4 Communication Connectors	29

3.5.5 STO Connector	30
3.6 Mounting	30

4 Operation and Features 31

4.1 Features and Getting Started	31
4.1.1 Initial Setup and Configuration	31
4.1.2 Input/Output Pin Functions	33
Programmable Digital I/O	33
Auxiliary Encoder Input	35
Programmable Analog I/O	35
Motor Thermistor	35
4.1.3 Feedback Operation	36
Absolute Encoder	36
1 Vp-p Sin/Cos Encoder	36
Incremental Encoder	37
Hall Sensors	37
Tachometer (± 10 VDC)	37
4.1.4 Power Supply Connections	38
AC or DC Power Modules	38
DC Only Power Modules	39
4.1.5 STO (Safe Torque Off)	40
STO Disable	41
4.1.6 External Shunt Resistor Connections	42
4.1.7 Logic Power Supply	43
4.1.8 Motor Connections	44
4.1.9 Power LEDs Functionality	44
Power LED	44
Status LED	44
4.1.10 Communication and Commissioning	45
EtherCAT Station Alias	45
EtherCAT Communication LEDs Functionality	45
4.1.11 Commutation	47
Sinusoidal Commutation	47
Trapezoidal Commutation	47
4.1.12 Homing	48
4.1.13 Firmware	48

A Specifications 49

A.1 Specifications Tables	49
---------------------------------	----

B Troubleshooting 51

B.1 Fault Conditions and Symptoms	51
Over-Temperature	51
Over-Voltage Shutdown	51
Under-Voltage Shutdown	51
Short Circuit Fault	52
Invalid Hall Sensor State	52
B.1.1 Software Limits	52
B.1.2 Connection Problems	52
B.1.3 Overload	52
B.1.4 Current Limiting	53
B.1.5 Motor Problems	53
B.1.6 Causes of Erratic Operation	53
B.2 Technical Support	54
B.2.1 Drive Model Information	54
B.2.2 Product Label Description	54
B.2.3 Warranty Returns and Factory Help	55

Index I

This section discusses characteristics of your DPE Digital Drive to raise your awareness of potential risks and hazards. The severity of consequences ranges from frustration of performance, through damage to equipment, injury or death. These consequences, of course, can be avoided by good design and proper installation into your mechanism.

1.1 General Safety Overview

In order to install a DPE drive into a servo system, you must have a thorough knowledge and understanding of basic electronics, computers and mechanics as well as safety precautions and practices required when dealing with the possibility of high voltages or heavy, strong equipment.

Observe your facility's lock-out/tag-out procedures so that work can proceed without residual power stored in the system or unexpected movements by the machine.



Notice

You must install and operate motion control equipment so that you meet all applicable safety requirements. Ensure that you identify the relevant standards and comply with them. Failure to do so may result in damage to equipment and personal injury.

Read this entire manual prior to attempting to install or operate the drive. Become familiar with practices and procedures that allow you to operate these drives safely and effectively. You are responsible for determining the suitability of this product for the intended application. The manufacturer is neither responsible nor liable for indirect or consequential damages resulting from the inappropriate use of this product.



Caution

Over current protective devices recognized by an international safety agency must be installed in line before the servo drive. These devices shall be installed and rated in accordance with the device installation instructions and the specifications of the servo drive (taking into consideration inrush currents, etc.). Servo drives that incorporate their own primary fuses do not need to incorporate over current protection in the end user's equipment.



Notice

High-performance motion control equipment can move rapidly with very high forces. Unexpected motion may occur especially during product commissioning. Keep clear of any operational machinery and never touch them while they are working.



Warning

Keep clear of all exposed power terminals (motor, DC Bus, shunt, DC power, transformer) when power is applied to the equipment. Follow these safety guidelines:

- Always turn off the main power and allow sufficient time for complete discharge before making any connections to the drive.
- Do not rotate the motor shaft without power. The motor acts as a generator and will charge up the power supply capacitors through the drive. Excessive speeds may cause over-voltage breakdown in the power output stage. Note that a drive having an internal power converter that operates from the high voltage supply will become operative.
- Do not short the motor leads at high motor speeds. When the motor is shorted, its own generated voltage may produce a current flow as high as 10 times the drive current. The short itself may not damage the drive but may damage the motor. If the connection arcs or opens while the motor is spinning rapidly, this high voltage pulse flows back into the drive (due to stored energy in the motor inductance) and may damage the drive.
- Do not make any connections to any internal circuitry. Only connections to designated connectors are allowed.
- Do not make any connections to the drive while power is applied.



Caution

- Do not reverse the power supply leads! Severe damage will result!
- If using relays or other means to disconnect the motor leads, be sure the drive is disabled before reconnecting the motor leads to the drive. Connecting the motor leads to the drive while it is enabled can generate extremely high voltage spikes which will damage the drive.



Caution

Use sufficient capacitance!

Pulse Width Modulation (PWM) drives require a capacitor on the high voltage supply to store energy during the PWM switching process. Insufficient power supply capacitance causes problems particularly with high inductance motors. During braking much of the stored mechanical energy is fed back into the power supply and charges its output capacitor to a higher voltage. If the charge reaches the drive's over-voltage shutdown point, output current and braking will cease. At that time energy stored in the motor inductance continues to flow through diodes in the drive to further charge the power supply capacitance. The voltage rise depends upon the power supply capacitance, motor speed, and inductance.



Caution

Make sure minimum inductance requirements are met!

Pulse Width Modulation (PWM) servo drives deliver a pulsed output that requires a minimum amount of load inductance to ensure that the DC motor current is properly filtered. The minimum inductance values for different drive types are shown in the individual data sheet specifications. If the drive is operated below its maximum rated voltage, the minimum load inductance requirement may be reduced. Most servo-motors have enough winding inductance. Some types of motors (e.g. "basket-wound", "pancake", etc.) do not have a conventional iron core rotor, so the winding inductance is usually less than 50 μ H.

If the motor inductance value is less than the minimum required for the selected drive, use an external filter card.

2 Products and System Requirements

This document is intended as a guide and general overview in selecting, installing, and operating *ADVANCED* Motion Controls® DigiFlex® Performance™ digital servo drives that use EtherCAT® for networking. These specific drives are referred to herein and within the product literature as DPE drives. Other drives in the DigiFlex Performance product family that utilize other methods of network communication such as CANopen, POWERLINK, Modbus TCP/RTU, Ethernet, or RS-485 are discussed in separate manuals that are available at www.a-m-c.com. Contained within each DigiFlex Performance product family manual are instructions on system integration, wiring, drive-setup, and standard operating methods.

2.1 DPE Drive Family Overview

The DPE drive family can power three phase brushless (servo, closed loop vector, closed loop stepper) or single phase (brushed, voice coil, inductive load) motors. The command source can be generated externally or can be supplied internally. A digital controller can be used to command and interact with DPE drives, and a number of dedicated and programmable digital and analog input/output pins are available for parameter observation and drive configuration. DPE drives are capable of operating in Profile or Cyclic Synchronous Current, Velocity, or Position Modes, and utilize Space Vector Modulation, which results in higher bus voltage utilization and reduced heat dissipation compared to traditional PWM. DPE drives also offer a variety of firmware-dependent feedback options.

DPE drives offer EtherCAT communication for multiple drive networking, and feature a USB interface for drive configuration and setup. Drive commissioning is accomplished using DriveWare, the setup software from *ADVANCED* Motion Controls, available for download at www.a-m-c.com.

2.1.1 Drive Datasheet

Each DPE digital drive has a separate datasheet that contains important information on the options and product-specific features available with that particular drive. The datasheet is to be used in conjunction with this manual for system design and installation.



Caution

In order to avoid damage to equipment, only after a thorough reading and understanding of this manual and the specific datasheet of the DPE drive being used should you attempt to install and operate the drive.

2.2 Products Covered

The products covered in this manual adhere to the following part numbering structure. However, additional features and/or options are readily available for OEM's with sufficient ordering volume. Feel free to contact *ADVANCED* Motion Controls for further information.

FIGURE 2.1 DPE Part Numbering Structure

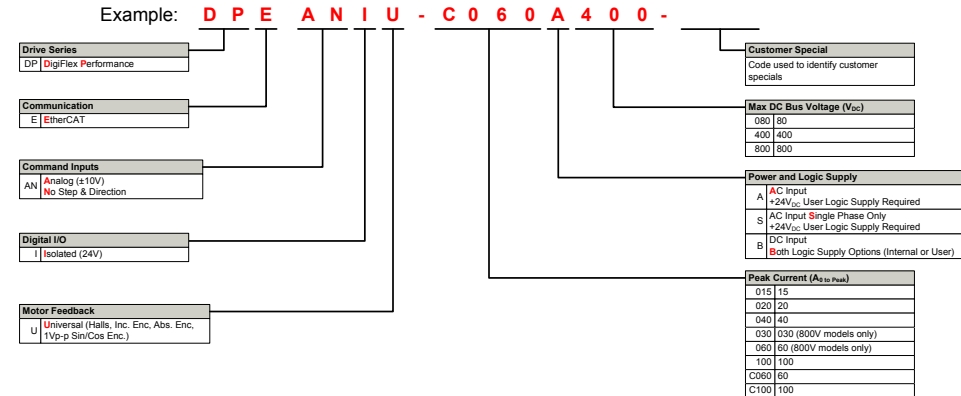


TABLE 2.1 Power Specifications - AC Power Modules

Description	Units	Power Specifications					
		015S400	040A400	C060A400	C100A400	030A800	060A800
Rated Voltage	VAC(VDC)	240 (339)	240 (339)	240 (339)	240 (339)	480 (678)	480 (678)
AC Supply Voltage Range	VAC	100-240	100-240	200-240	200-240	200-480	200-480
AC Supply Minimum	VAC	90	90	180	180	180	180
AC Supply Maximum	VAC	264	264	264	264	528	528
AC Input Phases	-	1	3	3	3	3	3
AC Supply Frequency	Hz	50-60	50-60	50-60	50-60	50-60	50-60
DC Supply Voltage Range	VDC	127-373	127-373	255-373	255-373	255-747	255-747
DC Bus Over Voltage Limit	VDC	394	394	420	420	850	850
DC Bus Under Voltage Limit	VDC	55	55	205	205	230	230
Maximum Peak Output Current	A (Arms)	15 (10.6)	40 (28.3)	60 (42.4)	100 (70.7)	30 (21.2)	60 (42.4)
Maximum Continuous Output Current	A (Arms)	7.5 (7.5)	20 (20)	30 (30)	50 (50)	15 (10.6)	30 (21.2)
Max. Continuous Output Power @ Rated Voltage ¹	W	2415	6441	9662	16103	6830	13650
Max. Continuous Power Dissipation @ Rated Voltage	W	127	339	509	848	360	720
Internal Bus Capacitance	μF	540	660	1120	1120	330	330
PWM Switching Frequency	kHz	20	20	14	10	10	10
External Shunt Resistor Minimum Resistance	Ω	25	25	20	20	note 2	40
Minimum Load Inductance (Line-To-Line)	μH	600	600	600	600	3000	3000

1. $P = (\text{DC Rated Voltage}) * (\text{Cont. RMS Current}) * 0.95$
2. Contact factory before using an external shunt resistor with this power module

TABLE 2.2 Power Specifications - DC Power Modules

Description	Units	Power Specifications	
		020B080	100B080
DC Supply Voltage Range	VDC	20-80	20-80
DC Bus Over Voltage Limit	VDC	88	88
DC Bus Under Voltage Limit	VDC	17	17
Maximum Peak Output Current	A (Arms)	20 (14.1)	100 (70.73)
Maximum Continuous Output Current	A (Arms)	10 (10)	60 (60)
Max. Continuous Output Power @ Rated Voltage ¹	W	760	4560
Max. Continuous Power Dissipation @ Rated Voltage	W	40	240
Internal Bus Capacitance	μF	33	500
PWM Switching Frequency	kHz	20	20
Minimum Load Inductance (Line-To-Line)	μH	600	250

TABLE 2.3 Control Specifications

Description	DPEANIU
Network Communication	EtherCAT (USB for Configuration)
Command Sources	$\pm 10V$ Analog, Over the Network, Encoder Following, Sequencing, Indexing, Jogging
Commutation Methods	Sinusoidal, Trapezoidal
Control Modes	Profile Current, Profile Velocity, Profile Position, Cyclic Synchronous Current, Cyclic Synchronous Velocity, Cyclic Synchronous Position
Motors Supported	Three Phase Brushless (Servo, Closed Loop Vector, Closed Loop Stepper), Single Phase (Brushed, Voice Coil, Inductive Load)
Hardware Protection	40+ Configurable Functions, Over Current, Over Temperature (Drive & Motor), Over Voltage, Short Circuit (Phase-Phase & Phase-Ground), Under Voltage
Programmable Digital I/O	11/7
Programmable Analog I/O	2/0
Primary I/O Logic Level	24 VDC

TABLE 2.4 Feedback Options


Description	DPEANIU
Hall Sensors	✓
Incremental Encoder	✓
Auxiliary Incremental Encoder	✓
Absolute Encoder (Hiperface®, EnDat® 2.1/2.2, BiSS C-Mode)	✓
1Vp-p Sine/Cosine Encoder	✓
Tachometer (10 \pm VDC)	✓
± 10 VDC Position	✓

Note: Drive will support either Incremental Encoder, Absolute Encoder, or 1Vp-p Sine/Cosine Encoder depending on drive firmware

2.2.1 Control Module

The diagram below shows the general block diagram for the DPEANIU control module. For complete pinouts, consult the drive's datasheet.

FIGURE 2.2 DPEANIU Control Module

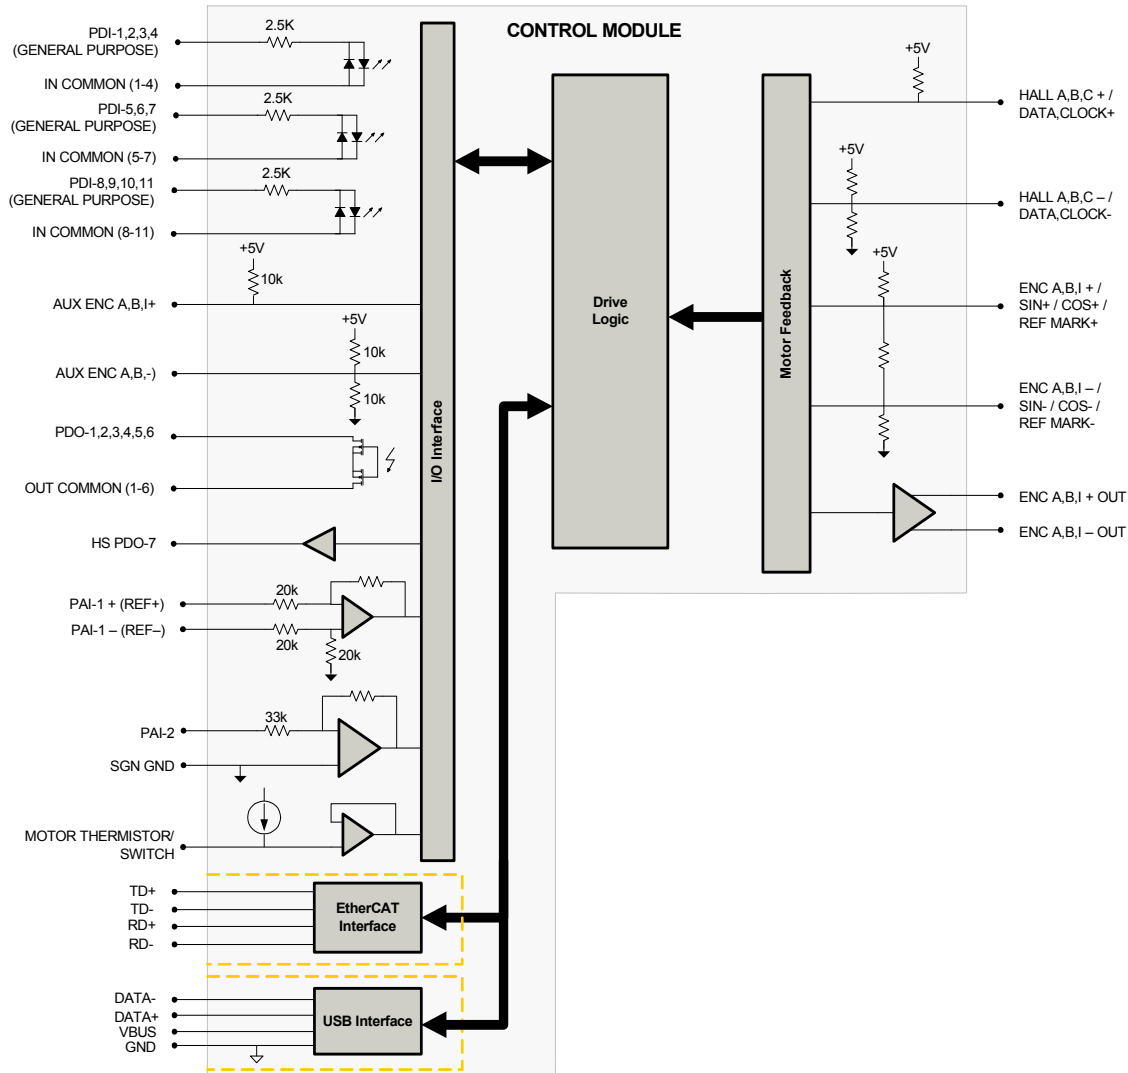

2.3 Communication Protocol



DPE digital drives offer networking capability through EtherCAT® communication. An auxiliary USB port is featured for configuring the drive through DriveWare.

EtherCAT communication works by exchanging messages between a "host" and "nodes". The messages contain information on specific drive functions, each of which is defined by a group of objects. An object is roughly equivalent to a memory location that holds a certain value. The values stored in the drive's objects are used to perform the drive functions (current loop, velocity loop, position loop, I/O functions, etc.). For more detailed information on EtherCAT communication with DZEANTU drives and a complete list of objects, consult the *ADVANCED* Motion Controls EtherCAT Communication Manual available for download at www.a-m-c.com.

The EtherCAT interface for *ADVANCED* Motion Controls DZEANTU drives follows the ETG.1000.6 EtherCAT Application Layer protocol specification and the ETG.6010 Implementation guideline for CiA402 drive profile (device profile for drives and motion control). ETG (EtherCAT Technology Group) is the organization that governs the EtherCAT standard. More information can be found at www.ethercat.org.

2.4 Control Modes

DPE digital drives operate in either Profile Current (Torque), Profile Velocity, Profile Position, Cyclic Synchronous Current, Cyclic Synchronous Velocity, or Cyclic Synchronous Position Mode. The setup and configuration parameters for these modes are commissioned through DriveWare. See the *ADVANCED* Motion Controls EtherCAT Communication Manual for mode configuration information.

2.4.1 Profile Modes

In Profile Modes, the trajectory is limited by the drive, using the Command Limiter values to limit the maximum command rate. If the host sends a large command step, the drive spreads the demand over some period of time to stay equal to or below the maximum defined rate.

Profile Current (Torque) In Current (Torque) Mode, the input command voltage controls the output current. The drive will adjust the output duty cycle to maintain the commanded output current. This mode is used to control torque for rotary motors (force for linear motors), but the motor speed is not controlled. The output current and other parameters can be monitored in DriveWare through the digital oscilloscope function. DriveWare also offers configuration of maximum and continuous current limit values.



Note

While in Current (Torque) Mode, the drive will maintain a commanded torque output to the motor based on the input reference command. Sudden changes in the motor load may cause the drive to output a high torque command with little load resistance, causing the motor to spin rapidly. Therefore, Current (Torque) Mode is recommended for applications using a digital position controller to maintain system stability.

Profile Velocity In Velocity Mode, the input command voltage controls the motor velocity. This mode requires the use of a feedback element to provide information to the drive about the motor velocity. DPE drives allow velocity control with either Hall Sensors, an encoder, or a tachometer as the feedback element. The motor velocity and other parameters can be monitored in DriveWare through the digital oscilloscope function. The feedback element being used for velocity control must be specified in DriveWare, which also offers configuration of velocity limits. See [“Feedback Supported” on page 10](#) for more information on feedback devices.

Profile Position In Position Mode, the input command voltage controls the actual motor position. This mode requires the use of a feedback element to provide information to the drive about the physical motor location. DPE drives allow position control with either an encoder or $\pm 10V$ Position feedback. The motor position and other parameters can be monitored in DriveWare through the digital oscilloscope function. The feedback element being used for position control must be specified in DriveWare, which also offers configuration of position limits. See [“Feedback Supported” on page 10](#) for more information on feedback devices.

2.4.2 Cyclic Synchronous Modes

Cyclic Synchronous Modes give responsibility of trajectory control to the host. The drive interpolates between command points, defining the rate by dividing the change in command

by the interpolation time period. This allows the drive to respond smoothly to each step in command.

Cyclic Synchronous Current In Cyclic Synchronous Current Mode, the drive closes the current loop. The host is allowed more control by having the ability to instantly add current feedforward values. This allows for gain compensation in applications with varying loads.

Cyclic Synchronous Velocity In Cyclic Synchronous Velocity Mode, the drive closes two control loops: velocity and current. The host is allowed more control by having the ability to instantly add velocity and current feedforward values. This allows for gain compensation in applications with varying loads.

Cyclic Synchronous Position In Cyclic Synchronous Position Mode, the drive closes three control loops: position, velocity, and current. The host can send target position, velocity feedforward, and current feedforward values to the drive. This allows for gain compensation in applications with varying loads.

2.5 Feedback Supported

DPE drives feature the ability to support a variety of primary feedback devices by downloading the appropriate firmware into the drive. Compatible firmware-dependent devices are Incremental Encoders, Absolute Sin/Cos Encoders (Hiperface®, EnDat®, and BiSS C-Mode), and 1Vp-p Sin/Cos Encoders. Consult the DriveWare Software Manual for instructions on how to download firmware into a digital servo drive.

Other supported feedback types that do not require a firmware change are Hall Sensors, Auxiliary Incremental Encoder, Tachometer, and ± 10 VDC Position feedback.


Feedback Polarity The drive compares the feedback signal to the command signal to produce the required output to the load by continually reducing the error signal to zero. The feedback element must be connected for *negative* feedback. Connecting the feedback element for positive feedback will lead to a motor "run-away" condition. In a case where the feedback lines are connected to the drive with the wrong polarity, the drive will attempt to correct the "error signal" by applying more command to the motor. With the wrong feedback polarity, this will result in a positive feedback run-away condition. The correct feedback polarity will be determined and configured during commissioning of the drive. Otherwise, to correct this, either change the order that the feedback lines are connected to the drive, or use DriveWare to reverse the internal velocity feedback polarity setting.

2.5.1 Incremental Encoder

DPE drive models can utilize incremental encoder feedback for velocity or position control, with the option of also using the encoder to commutate the motor. The encoder provides incremental position feedback that can be extrapolated into very precise velocity or position information. With an encoder being used as the feedback element, the input command controls the motor velocity or motor position, with the frequency of the encoder pulses closing the velocity and/or position loop. The encoder signals are read as "pulses" that the

drive uses to essentially keep track of the motor's speed, position and direction of rotation. Based on the speed and order in which these pulses are received from the encoder, the drive can interpret the motor velocity and physical location. The actual motor speed and physical location can be monitored within the configuration software, or externally through network commands.

Figure 2.3 below represents differential encoder "pulse" signals, showing how dependent on which signal is read first and at what frequency the "pulses" arrive, the speed and direction of the motor shaft can be extrapolated. By keeping track of the number of encoder "pulses" with respect to a known motor "home" position, DPC drives are able to ascertain the actual motor location.

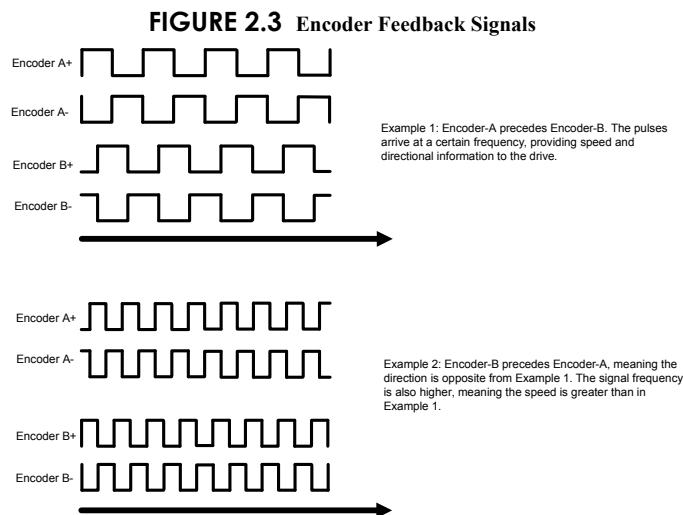

Note

The high resolution of motor mounted encoders allows for excellent velocity and position control and smooth motion at all speeds. Encoder feedback should be used for applications requiring precise and accurate velocity and position control, and is especially useful in applications where low-speed smoothness is the objective.


2.5.2 Absolute Encoder

DPE drives support Hiperface®, EnDat® (2.1/2.2 command set), or BiSS C-Mode absolute encoders for velocity and absolute position feedback. The encoder resolution and other options can be configured within the drive configuration software. The drive breaks down the signals from the encoder into individual reference points (counts). For feedback devices that accept 1Vp-p signals, the interpolation is configurable in powers of 2 from 1 to 512 lines per Sin/Cos cycle. The quadrature number of counts per cycle is the interpolation value multiplied by 4, as shown in Figure 2.4. This allows for very high interpolated encoder resolution (4-2048 counts).



The absolute position feedback eliminates the need for a homing routine when the drive is powered on.

FIGURE 2.4 Sin/Cos Encoder Interpolation

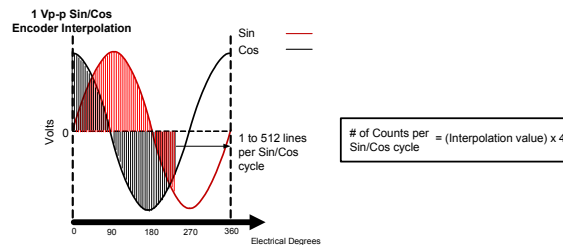

2.5.3 1Vp-p Sin/Cos Encoder

DPE drives support 1Vp-p Sin/Cos encoders for position and velocity feedback. The drive breaks down the 1Vp-p sinusoidal signals from the encoder into individual reference points (counts). The interpolation is configurable in powers of 2 from 1 to 512 lines per Sin/Cos cycle. The quadrature number of counts per cycle is the interpolation value multiplied by 4, as shown in [Figure 2.4](#). This allows for very high interpolated encoder resolution (4-2048 counts per Sin/Cos cycle).

2.5.4 Hall Sensors

DPE drives can use single-ended or differential Hall Sensors for commutation and/or velocity control. The Hall Sensors (typically three) are built into the motor to detect the position of the rotor magnetic field. With Hall Sensors being used as the feedback element, the input command controls the motor velocity, with the Hall Sensor frequency closing the velocity loop.



Hall velocity mode is not optimized for relatively high or relatively low Hall frequencies. To determine if Hall velocity mode is right for your application, contact Applications Engineering.

For more information on using Hall Sensors for trapezoidal commutation, see [“Trapezoidal Commutation” on page 47](#).

2.5.5 Auxiliary Incremental Encoder

The auxiliary encoder input pins can be used as a command source for encoder following mode, or as a secondary feedback device input for closing the position loop. The particular function is configured in the configuration software.

2.5.6 Tachometer (± 10 VDC)

DPE drives support the use of a tachometer for velocity feedback. The tachometer measures the rotary speed of the motor shaft and returns an analog voltage signal to the drive for velocity control. DPE drives provide a Programmable Analog Input on the motor Feedback Connector that is available for use with a tachometer. The tachometer signal is limited to ± 10 VDC.

2.5.7 ± 10 VDC Position

DPE drives accept an analog ± 10 VDC Position feedback, typically in the form of a load-mounted potentiometer. The feedback signal must be conditioned so that the voltage does not exceed ± 10 V, and is connected to the drive through the Programmable Analog Input. In DriveWare, the connection method that is used must be selected under the Position Loop Feedback options. See the DriveWare Software Guide for more information.

2.6 Command Sources

The input command source for DPE drives can be configured for one of the following options.

2.6.1 $\pm 10V$ Analog

DPE drives accept a single-ended or differential analog signal with a range of ± 10 V from an external source. The input command signals should be connected to the programmable input on the I/O Signal Connector. See [“Programmable Analog I/O” on page 35](#) for more information.

2.6.2 Encoder Following

DPE drives can utilize Encoder Following as a form of input command. In Encoder Following mode, an auxiliary encoder signal can be used to command the drive in a master/slave configuration. The gearing ratio (input counts to output counts ratio) can be configured in DriveWare by the user. Encoder Following is only a valid option when the DPE drive is operated in position mode.

2.6.3 Indexing and Sequencing

DPE drives allow configuration of up to 16 separately defined Index tasks in DriveWare. Indexes can be either Absolute (commands a pre-defined move to an absolute position) or Relative (commands a pre-defined move relative to the current position). Indexes can be combined with Homing routines and other control functions to form up to 16 different Sequences. Sequences can be configured to initiate on power-up, via a digital input, or by using an external network command.

2.6.4 Jogging

DPE drives allow configuration of two separate Jog velocities in DriveWare, commanding motion at a defined constant velocity with infinite distance.

2.6.5 Over the Network

DPE drives can utilize network communication as a form of input command through the EtherCAT interface. In order to send commands to the drive over the EtherCAT network, the command source in DriveWare must be set to Communication Channel. For more information on commanding the drive with EtherCAT, see [“Communication and Commissioning” on page 45](#).

2.7 System Requirements

To successfully incorporate a DPE digital servo drive into your system, you must be sure it will operate properly based on electrical, mechanical, and environmental specifications, follow some simple wiring guidelines, and perhaps make use of some accessories in anticipating impacts on performance.

2.7.1 Specifications Check

Before selecting a DPE digital servo drive, a user should consider the requirements of their system. This involves calculating the voltage, current, torque, and power requirements of the system, as well as considering the operating environment and any other equipment the drive will be interfacing with. Before attempting to install or operate a DPE servo drive, be sure all the following items are available:

- DPE Digital Servo Drive
- DPE Drive Datasheet (specific to your model)
- DPE Series Digital Hardware Installation Manual
- DriveWare Software Guide

2.7.2 Motor Specifications

DPE digital servo drives have a given current and voltage rating unique to each drive. Based on the necessary application requirements and the information from the datasheet of the motor being used, a DPE drive may be selected that will best suit the motor capabilities. Some general guidelines that are useful when pairing a DPE servo drive with a motor:

- The **motor current** I_M is the required motor current in amps DC, and is related to the torque needed to move the load by the following equation:

$$I_M = \frac{\text{Torque}}{K_T}$$

Where:

K_T -motor torque constant

The motor current will need to be calculated for both continuous and peak operation. The peak torque will be during the acceleration portion of the move profile. The continuous torque is the average torque required by the system during the move profile, including dwell times.

- The system voltage requirement is based on the motor properties and how fast and hard the motor is driven. The system voltage requirement is equal to the **motor voltage**, V_M , required to achieve the move profile.

$$V_M = (K_E \cdot S_M) + (I_M \cdot R_M)$$

Where:

K_E -motor back EMF constant

S_M -motor speed (use the maximum speed expected for the application)

I_M -motor current (use the maximum current expected for the application)

R_M -motor line-to-line resistance

- The motor inductance is vital to the operation of DPE servo drives, as it ensures that the DC motor current is properly filtered.



Caution

A motor that does not meet the rated minimum inductance value of the DPE drive may damage the drive! If the motor inductance value is less than the minimum required for the selected drive, use of an external filter card is necessary.

A minimum motor inductance rating can be found in the drive datasheet. If the drive is operated below the maximum rated voltage, the minimum load inductance requirement may be reduced.

2.7.3 Power Supply Specifications

DPE servo drives operate off a single-phase AC Power Supply. To avoid nuisance over- or under-voltage errors caused by fluctuations in the power supply, the system power supply voltage should be at least 10% above the entire system voltage requirement, and at least 10% below the lowest value of the following:

- Drive over voltage
- External shunt regulator turn-on voltage

Use of a shunt regulator is necessary in systems where motor deceleration or a downward motion of the motor load will cause the system's mechanical energy to be regenerated via the drive back onto the power supply. This regenerated energy can charge the power supply capacitors to levels above that of the DPE drive over-voltage shutdown level. If the power supply capacitance is unable to handle this excess energy, or if it is impractical to supply enough capacitance, then an external shunt regulator must be used to dissipate the regenerated energy. The shunt regulator will "turn-on" at a certain voltage level (set below the drive over-voltage shutdown level) and discharge the regenerated electric energy in the form of heat.

The power supply current rating is based on the maximum current that will be required by the system. If the power supply powers more than one drive, then the current requirements for each drive should be added together. Due to the nature of servo drives, the current into the drive does not always equal the current out of the drive. However, the *power* in is equal to the *power* out. Use the following equation to calculate the **power supply output current, I_{PS}** , based on the motor current requirements.

$$I_{PS} = \frac{V_M \cdot I_M}{V_{PS} \cdot (0.98)}$$

Where:

V_{PS} -nominal power supply voltage

I_M -motor current

V_M -motor voltage

Use values of V and I at the point of maximum power in the move profile (when $V_M I_M = \max$). This will usually be at the end of a hard acceleration when both the torque and speed of the motor is high.

2.7.4 Environment

To ensure proper operation of a DPE servo drive, it is important to evaluate the operating environment prior to installing the drive.

TABLE 2.5 Environmental Specifications

Environmental Specifications	
Parameter	Description
Humidity	90%, non-condensing
Baseplate Maximum Allowable Temperature	0 - 75 °C


Shock/Vibrations While DPE drives are designed to withstand a high degree of mechanical shock and vibration, too much physical abuse can cause erratic behavior, or cause the drive to cease operation entirely. Be sure the drive is securely mounted in the system to reduce the shock and vibration the drive will be exposed to. The best way to secure the drive against mechanical vibration is to use screws to mount the DPE drive against its baseplate. For information on mounting options and procedures, see [“Mounting” on page 30](#).



Caution

Care should be taken to ensure the drive is securely mounted in a location where no moving parts will come in contact with the drive.

Ambient Temperature Range and Thermal Data DPE drives contain a built-in over-temperature disabling feature if the baseplate temperature rises above 75 degrees Celsius. For a specific AC supply voltage and a specific output current, [Figure 2.5](#) below specifies an upper limit to the ambient temperature range DPE drives can operate within while keeping the baseplate temperature below the maximum baseplate temperature. It is recommended to mount the baseplate of the DPE drive to a heatsink and/or use fan cooling for best thermal management results. For mounting instructions see [“Mounting” on page 30](#).

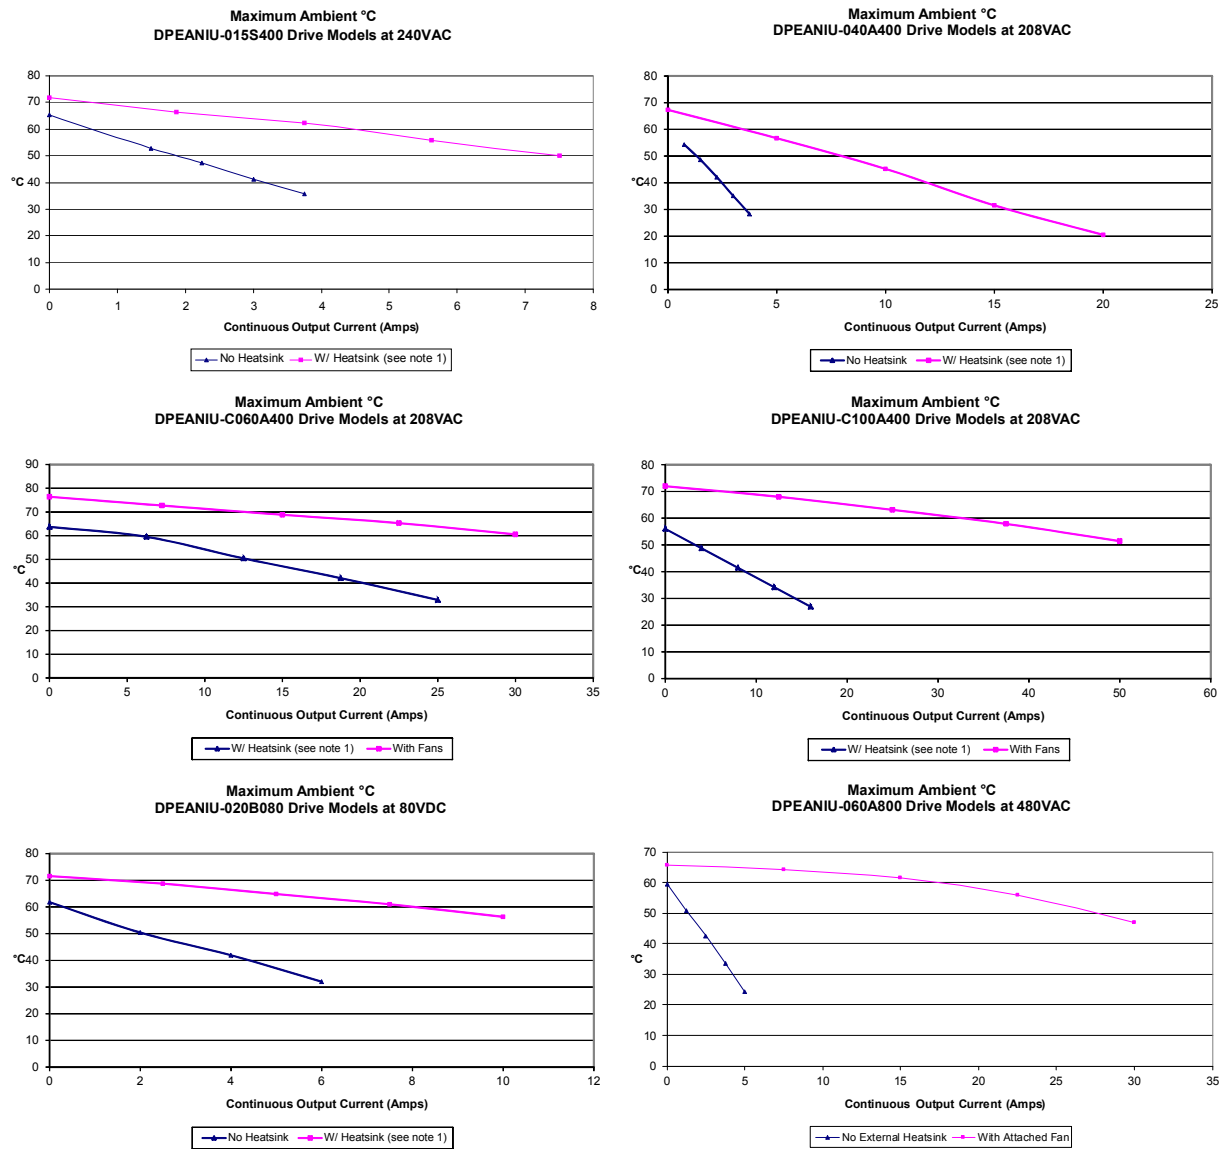FIGURE 2.5 DPE Drives Maximum Ambient Temperature Range


1. The heatsink used in the above test is a 15" x 22" x 0.65" aluminum plate.
2. Contact the factory for DPEANIU-100B080 thermal data.

3 Integration in the Servo System

This chapter will give various details on incorporating a DPE servo drive into a system, such as how to properly ground the DPE drive along with the entire system, and how to properly connect motor wires, power supply wires, feedback wires, communication cables, and inputs into the DPE drive.

3.1 LVD Requirements

The servo drives covered in the LVD Reference report were investigated as components intended to be installed in complete systems that meet the requirements of the Machinery Directive. In order for these units to be acceptable in the end users' equipment, the following conditions of acceptability must be met.

1. European approved overload and current protection must be provided for the motors as specified in section 7.2 and 7.3 of EN60204.1.
2. A disconnect switch shall be installed in the final system as specified in section 5.3 of EN60204.1.
3. All drives that do not have a grounding terminal must be installed in, and conductively connected to a grounded end use enclosure in order to comply with the accessibility requirements of section 6, and to establish grounding continuity for the system in accordance with section 8 of EN60204.1.
4. A disconnecting device that will prevent the unexpected start-up of a machine shall be provided if the machine could cause injury to persons. This device shall prevent the automatic restarting of the machine after any failure condition shuts the machine down.
5. European approved over current protective devices must be installed in line before the servo drive, these devices shall be installed and rated in accordance with the installation instructions (the installation instructions shall specify an over current rating value as low as possible, but taking into consideration inrush currents, etc.). Servo drives that incorporate their own primary fuses do not need to incorporate over protection in the end users' equipment.

These items should be included in your declaration of incorporation as well as the name and address of your company, description of the equipment, a statement that the servo drives must not be put into service until the machinery into which they are incorporated has been declared in conformity with the provisions of the Machinery Directive, and identification of the person signing.

3.2 CE-EMC Wiring Requirements

The following sections contain installation instructions necessary for meeting EMC requirements.

General

1. Shielded cables must be used for all interconnect cables to the drive and the shield of the cable must be grounded at the closest ground point with the least amount of resistance.
2. The drive's metal enclosure must be grounded to the closest ground point with the least amount of resistance.
3. The drive must be mounted in such a manner that the connectors and exposed printed circuit board are not accessible to be touched by personnel when the product is in operation. If this is unavoidable there must be clear instructions that the amplifier is not to be touched during operation. This is to avoid possible malfunction due to electrostatic discharge from personnel.

Analog Input Drives

4. A Fair Rite model 0443167251 round suppression core must be fitted to the low level signal interconnect cables to prevent pickup from external RF fields.

PWM Input Drives

5. A Fair Rite model 0443167251 round suppression core must be fitted to the PWM input cable to reduce electromagnetic emissions.

MOSFET Switching Drives

6. A Fair Rite model 0443167251 round suppression core must be fitted at the load cable connector to reduce electromagnetic emissions.
7. An appropriately rated Cosel TAC series AC power filter in combination with a Fair Rite model 5977002701 torroid (placed on the supply end of the filter) must be fitted to the AC supply to any MOSFET drive system in order to reduce conducted emissions fed back into the supply network.

IGBT Switching Drives

8. An appropriately rated Cosel Tac series AC power filter in combination with a Fair Rite model 0443167251 round suppression core (placed on the supply end of the filter) must be fitted to the AC supply to any IGBT drive system in order to reduce conducted emissions fed back into the supply network.
9. A Fair Rite model 0443164151 round suppression core and model 5977003801 torroid must be fitted at the load cable connector to reduce electromagnetic emissions.

Fitting of AC Power Filters

10. It is possible for noise generated by the machine to "leak" onto the main AC power, and then get distributed to nearby equipment. If this equipment is sensitive, it may be adversely affected by the noise. AC power filters can filter this noise and keep it from getting on the AC power signal. The above mentioned AC power filters should be mounted

flat against the enclosure of the product using the mounting lugs provided on the filter. Paint should be removed from the enclosure where the filter is fitted to ensure good metal to metal contact. The filter should be mounted as close to the point where the AC power filter enters the enclosure as possible. Also, the AC power cable on the load end of the filter should be routed far from the AC power cable on the supply end of the filter and all other cables and circuitry to minimize RF coupling.

3.2.1 Ferrite Suppression Core Set-up

If PWM switching noise couples onto the feedback signals or onto the signal ground, then a ferrite suppression core can be used to attenuate the noise. Take the motor leads and wrap them around the suppression core as many times as reasonable possible, usually 2-5 times. Make sure to strip back the cable shield and only wrap the motor wires. There will be two wires for single phased (brushed) motors and 3 wires for three phase (brushless) motors. Wrap the motor wires together as a group around the suppression core and leave the motor case ground wire out of the loop. The suppression core should be located as near to the drive as possible. TDK ZCAT series snap-on filters are recommended for reducing radiated emissions on all I/O cables.

3.2.2 Inductive Filter Cards


Inductive filter cards are added in series with the motor and are used to increase the load inductance in order to meet the minimum load inductance requirement of the drive. They also serve to counteract the effects of line capacitance found in long cable runs and in high voltage systems. These filter cards also have the added benefit of reducing the amount of PWM noise that couples onto the signal lines.

3.3 Grounding

In most servo systems the case grounds of all the system components should be connected to a single Protective Earth (PE) ground point in a "star" configuration. Grounding the case grounds at a central PE ground point through a single low resistance wire reduces the chance for ground loops and helps to minimize high frequency voltage differentials between components. All ground wires must be of a heavy gauge and be as short as possible. The following should be securely grounded at the central PE grounding point:

- Motor chassis
- Controller chassis
- Power supply chassis
- DPE drive chassis

FIGURE 3.1 System Grounding

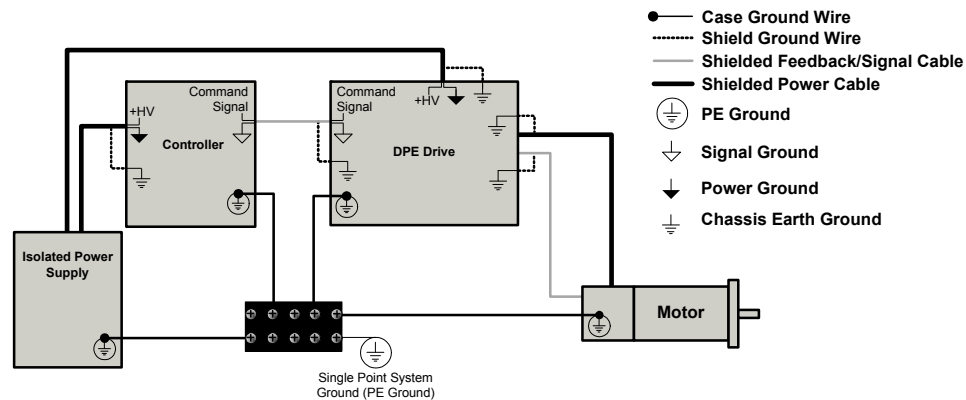

Ground cable shield wires at the drive side to a chassis earth ground point.

The power ground and the input reference command signal ground are oftentimes at a different potential than chassis/PE ground. The signal ground of the controller must be connected to the signal ground of the DPE drive to avoid picking up noise due to the "floating" differential servo drive input. In systems using an isolated DC power supply, signal ground and/or power ground can be referenced to chassis ground. First decide if this is both appropriate and safe. If this is the case, they can be grounded at the central grounding point.



Grounding is important for safety. The grounding recommendations in this manual may not be appropriate for all applications and system machinery. It is the responsibility of the system designer to follow applicable regulations and guidelines as they apply to the specific servo system.

3.4 Wiring

Servo system wiring typically involves wiring a controller (digital or analog), a servo drive, a power supply, and a motor. Wiring these servo system components is fairly easy when a few simple rules are observed. As with any high efficiency PWM servo drive, the possibility of noise and interference coupling through the cabling and wires can be harmful to overall system performance. Noise in the form of interfering signals can be coupled:

- Capacitively (electrostatic coupling) onto signal wires in the circuit (the effect is more serious for high impedance points).
- Magnetically to closed loops in the signal circuit (independent of impedance levels).
- Electromagnetically to signal wires acting as small antennas for electromagnetic radiation.
- From one part of the circuit to other parts through voltage drops on ground lines.

The main source of noise is the high DV/DT (typically about 1V/nanosecond) of the drive's output power stage. This PWM output can couple back to the signal lines through the output and input wires. The best methods to reduce this effect are to move signal and motor leads apart, add shielding, and use differential inputs at the drive. For extreme cases, use of an inductive filter card or a noise suppression device is recommended.

Unfortunately, low-frequency magnetic fields are not significantly reduced by metal enclosures. Typical sources are 50 or 60 Hz power transformers and low frequency current changes in the motor leads. Avoid large loop areas in signal, power-supply, and motor wires. Twisted pairs of wires are quite effective in reducing magnetic pick-up because the enclosed area is small, and the signals induced in successive twist cancel.

ADVANCED Motion Controls recommends using the following hand crimp tools for the appropriate I/O and Feedback cable and wire preparation. Consult the drive datasheet to see which connectors are used on a specific drive.

Drive Connector	Hand Crimp Tool Manufacturer and Part Number
6-pin, 3.96 mm spaced, friction lock header	Tyco: P/N 770522-1
High Density D-sub headers	Tyco: P/N 90800-1

3.4.1 Wire Gauge

As the wire diameter decreases, the impedance increases. Higher impedance wire will broadcast more noise than lower impedance wire. Therefore, when selecting the wire gauge for the motor power wires, power supply wires, and ground wires, it is better to err on the side of larger diameter wire rather than too thin. This becomes more critical as the cable length increases. The following table provides recommendations for selecting the appropriate wire size for a specific current. These values should be used as reference only. Consult any applicable national or local electrical codes for specific guidelines.

Current (A)	Minimum Wire Size (AWG)	mm ²
10	#20	0.518
15	#18	0.823
20	#16	1.31
35	#14	2.08
45	#12	3.31

Current (A)	Minimum Wire Size (AWG)	mm ²
60	#10	5.26
80	#8	8.37
120	#6	13.3
150	#0	53.5
200	#00	67.4

3.4.2 Motor Wires

The motor power wires supply power from the drive to the motor. Use of a twisted, shielded pair for the motor power cables is recommended to reduce the amount of noise coupling to sensitive components.

- For a single phase motor or voice coil, twist the two motor wires together as a group.
- For a three phase motor, twist all three motor wires together as a group.



DO NOT use wire shield to carry motor current or power!

Ground the motor power cable shield at one end only to the drive chassis ground. The motor power leads should be bundled and shielded in their own cable and kept separate from feedback signal wires.

3.4.3 Power Supply Wires


The PWM current spikes generated by the power output-stage are supplied by the internal power supply capacitors. In order to keep the current ripple on these capacitors to an acceptable level it is necessary to use heavy power supply leads and keep them as short as possible. Reduce the inductance of the power leads by twisting them. Ground the power supply cable shield at one end only to the drive chassis ground.

When multiple drives are installed in a single application, precaution regarding ground loops must be taken. Whenever there are two or more possible current paths to a ground connection, damage can occur or noise can be introduced in the system. The following rules apply to all multiple axis installations, regardless of the number of power supplies used:

1. Run separate power supply leads to each drive directly from the power supply filter capacitor.
2. Never "daisy-chain" any power or DC common connections. Use a "star"-connection instead.

3.4.4 Feedback Wires

Use of a twisted, shielded pair for the feedback wires is recommended. Ground the shield at one end only to the drive chassis ground. Also make sure that the feedback connector and D-sub shell preserve the shield continuity. Route cables and/or wires to minimize their length and exposure to noise sources. The motor power wires are a major source of noise, and the motor feedback wires are susceptible to receiving noise. This is why it is never a good idea to route the motor power wires with the motor feedback wires, even if they are shielded. Although both of these cables originate at the drive and terminate at the motor, try to find separate paths that maintain distance between the two. A rule of thumb for the minimum distance between these wires is 10cm for every 10m of cable length.

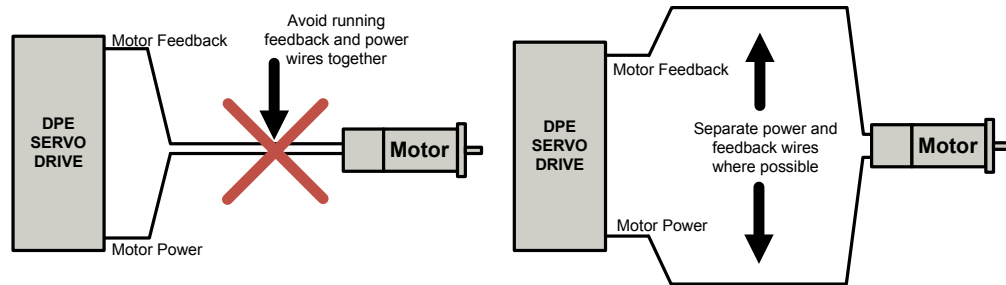FIGURE 3.2 Feedback Wiring

3.4.5 I/O and Signal Wires

Use of a twisted, shielded pair for the I/O and Signal wires is recommended. Connect the shield to the drive chassis ground. The servo drive's reference input circuit will attenuate the common mode voltage between signal source and drive power grounds.



Notice

In case of a single-ended reference signal when using $\pm 10V$ as the input command source, connect the command signal to "+ REF IN" and connect the command return and "- REF IN" to signal ground.

Long signal wires (10-15 feet and up) can also be a source of noise when driven from a typical OP-AMP output. Due to the inductance and capacitance of the wire the OP-AMP can oscillate. It is always recommended to set a fixed voltage at the controller and then check the signal at the drive with an oscilloscope to make sure that the signal is noise free.

3.5 Connector Types

Depending on the specific drive model, typically a DPE drive connection interface will consist of:

- **Power Connectors** - used for Logic, Motor, and AC or DC Power, as well as optional external shunt regulator connections
- **Feedback Connectors** - used for primary and auxiliary feedback connections, programmable inputs and outputs, and other drive functions
- **EtherCAT Communication Connector** - used for EtherCAT networking connections
- **Auxiliary USB Communication Connector** - used for USB drive communication necessary for commissioning with DriveWare
- **I/O Signal Connector** - used for programmable inputs and outputs as well as some feedback connections.
- **STO Connector** - used for Safe Torque Off (STO) functionality.

The different types of connectors used in the DPE drive series are shown in the sections below. Consult the specific drive datasheet for the actual connectors and pin labels used on the drive.

3.5.1 Power Connectors

TABLE 3.1 +24V LOGIC - Logic Power Connector

 
+24V LOGIC - Logic Power Connector		
Connector Information		2-port, 3.5 mm spaced insert connector
Mating Connector	Details	Phoenix Contact: P/N 1840366
	Included with Drive	Yes
		

TABLE 3.2 POWER / MOTOR POWER / BRAKE - Power Connector

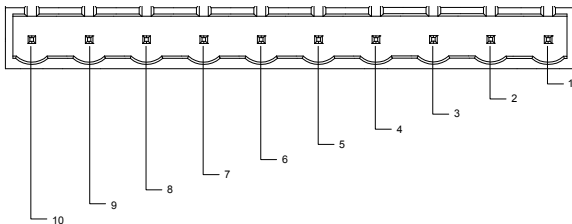
BRAKE/LOGIC - Logic Power Connector		
Connector Information		10-port, 5.08 mm spaced, enclosed, friction lock header
Mating Connector	Details	Phoenix Contact: P/N 1781069
	Included with Drive	Yes
		

TABLE 3.3 POWER / MOTOR POWER / LOGIC - Power Connector

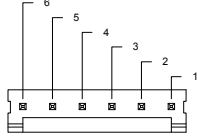
BRAKE/LOGIC - Logic Power Connector		
Connector Information		6-pin, 3.96 mm spaced, friction lock header
Mating Connector	Details	AMP: Plug P/N 770849-6; Terminals P/N 770522-1 (loose) or 770476-1 (strip)
	Included with Drive	Yes
		

TABLE 3.4 AC POWER / MOTOR POWER / DC POWER - Power Connector

 
AC POWER / MOTOR POWER / DC POWER - Power Connector		
Connector Information		4-port, 10.16 mm spaced, enclosed, friction lock header
Mating Connector	Details	Not applicable
	Included with Drive	Not applicable
		

TABLE 3.5 AC POWER / MOTOR POWER - Power Connector

 
AC POWER / MOTOR POWER / DC POWER - Power Connector		
Connector Information		4-port, 5.0 mm spaced, push-in front spring connection header
Mating Connector	Details	Push-in direct plug-in method for solid or stranded conductors with or without ferrules
	Included with Drive	No
		

TABLE 3.6 DC POWER - Power Connector

 
AC POWER / MOTOR POWER / DC POWER - Power Connector		
Connector Information		5-port, 5.0 mm spaced, push-in front spring connection header
Mating Connector	Details	Push-in direct plug-in method for solid or stranded conductors with or without ferrules
	Included with Drive	Not applicable
		

TABLE 3.7 DC POWER / MOTOR POWER - Power Connector

 
 
DC POWER / MOTOR POWER - Power Connector		
Connector Information		4-port, 7.62 mm spaced, enclosed, friction lock header
Mating Connector	Details	Phoenix Contact: P/N 1804920
	Included with Drive	Yes
		

TABLE 3.8 AC POWER - Power Connector

ACPOWER - Power Connector		
Connector Information		3-port, 7.62 mm spaced, enclosed, friction lock header
Mating Connector	Details	Phoenix Contact: P/N 1804917
	Included with Drive	Yes
		

3.5.2 Feedback Connectors

TABLE 3.9 FEEDBACK - Feedback Connector


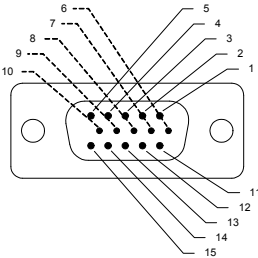
FEEDBACK - Feedback Connector		
Connector Information		15-pin, high-density, female D-sub
Mating Connector	Details	TYCO: Plug P/N 748364-1; Housing P/N 5748677-2; Terminals P/N 1658670-2 (loose) or 1658670-1 (strip)
	Included with Drive	No
		

TABLE 3.10 AUX ENCODER - Auxiliary Feedback Connector


AUX ENCODER - Auxiliary Feedback Connector		
Connector Information		15-pin, high-density, male D-sub
Mating Connector	Details	TYCO: Plug P/N 1658681-1; Housing P/N 5748677-2; Terminals P/N 1658686-2 (loose) or 1658686-1 (strip)
	Included with Drive	No

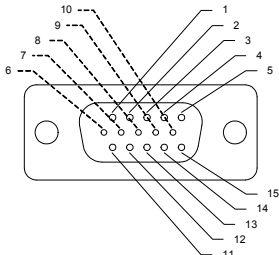

3.5.3 I/O Connectors

TABLE 3.11 I/O - Signal Connector

I/O - Signal Connector		
Connector Information		26-pin, high density, female D-sub
Mating Connector	Details	TYCO: Plug P/N 1658671-1; Housing P/N 5748677-3; Terminals P/N 1658670-2 (loose) or 1658670-1 (strip)
	Included with Drive	No

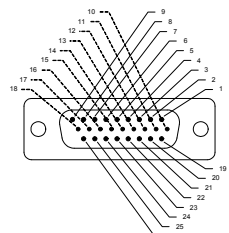

3.5.4 Communication Connectors

TABLE 3.12 COMM - EtherCAT Communication Connector

COMM - EtherCAT Communication Connector		
Connector Information		Shielded, dual RJ-45 socket with LEDs
Mating Connector	Details	Standard CAT 5e or CAT 6 ethernet cable
	Included with Drive	No

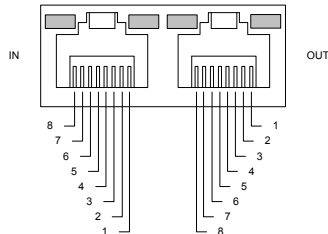
 
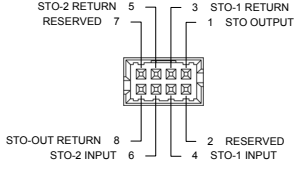


TABLE 3.13 AUX COMM - USB Communication Connector

AUX COMM - USB Communication Connector		
Connector Information		5-pin, Mini USB B Type port
Mating Connector	Details	TYCO: 1496476-3 (2-meter STD-A to MINI-B ASSY)
	Included with Drive	No
		

3.5.5 STO Connector

TABLE 3.14 Safe Torque Off (STO) connector

STO Connector		
Connector Information		8-port, 2.00 mm spaced, enclosed, friction lock header
Mating Connector	Details	Molex: P/N 51110-0860 (housing); 50394-8051 (pins)
	Included with Drive	No
		

3.6 Mounting

DPE drives provide a number of mounting configuration options. The drive baseplate includes perimeter mounting screwholes allowing different mounting arrangements depending on the requirements or space limitations of the system. See the drive datasheet for specific mounting dimensions and screwhole locations.

4 Operation and Features

This chapter will present a brief introduction on how to test and operate a DPE servo drive. Read through this entire section before attempting to test the drive or make any connections.

4.1 Features and Getting Started

To begin operation with your DPE drive, be sure to read and understand the previous chapters in this manual as well as the drive datasheet and the DriveWare Software Guide. Ensure that all system specifications and requirements have been met, and become familiar with the capabilities and functions of the DPE drive. Also, be aware of the [“Troubleshooting”](#) section at the end of this manual for solutions to basic operation issues.

4.1.1 Initial Setup and Configuration

Carefully follow the grounding and wiring instructions in the previous chapters to make sure your system is safely and properly set up. For initial testing purposes, it is not necessary to use a controller to provide a command input, or to have any load attached to the motor. The items required will be:

- DPE Servo Drive
- Motor
- AC Power Supply and Logic Power Supply for supplying power to system
- DriveWare Setup Software and Software Guide for detailed instructions on how to setup, tune and configure a DPE drive in DriveWare

The following steps outline the general procedure to follow when commissioning a DPE drive for the first time. The DriveWare Software Guide contains more detailed information on each step.

1. **Check System Wiring:** Before beginning, check the wiring throughout the system to ensure proper connections and that all grounding and safety regulations have been followed appropriately for the system.



Caution

Do not apply power to the system until certain all wiring and grounding has been setup safely and properly!

2. **Apply Power:** Power must be applied to the drive before any communication or configuration can take place. Turn on the Logic supply, then turn on the main Power supply. Use a multimeter or voltmeter to check that both power supply levels are within their specified ranges.
3. **Establish Connection:** Open DriveWare on the PC. The DPE drive should be connected to the PC with a USB cable. Choose the "Connect to a drive" option when DriveWare starts, and enter the appropriate communication settings in the options window that appears. See the DriveWare Software Guide for more information on connecting to a drive. For connection issues, see ["Connection Problems" on page 52](#).
4. **Configure the drive in DriveWare:** DriveWare allows the user to manually configure user units, motor and feedback information, system parameters and limits, tune the Current, Velocity and Position Loops, commutate the motor, and assign drive and software "actions" to specific events. Consult the DriveWare Software Guide for detailed instructions.
5. **Connect to the Controller:** Once the drive has been properly commissioned, use an external controller to command an input signal to the drive. The controller wiring and setup should follow the safety and grounding guidelines and conventions as outlined in ["Grounding" on page 22](#).

4.1.2 Input/Output Pin Functions

DPE drives provide a number of various input and output pins for parameter observation and drive configuration options. Consult the drive datasheet to see which input/output pin functions are available for each drive.

Programmable Digital I/O The single-ended and differential Programmable Digital I/O can be assigned to over 40 different functions in DriveWare. The polarity of the signals can be set to active HIGH or active LOW depending on the preference of the user. The differential high speed inputs can also be used as command source inputs with an Auxiliary Encoder (see [“Auxiliary Encoder Input”](#) below). DPE drives offer both isolated and non-isolated Programmable Digital I/O.

24VDC Digital I/O Specification

The 24VDC Digital I/O is designed to be compatible with controllers that interface with 24VDC signals, using optical isolation that separates the drive signal ground from the controller signal ground. Isolation increases a system's noise immunity by helping to eliminate current loops and ground currents.

- **Inputs** - The Isolated Digital Inputs use bi-directional optical isolators to detect signals from the controller. Dual LED's in the optical isolator allow current to flow in either direction. Current flow through the LED activates the transistor, and the drive responds depending on whether the transistor is active or not. The presence or absence of current in the LED determines the logic level, not the direction of current. This flexibility allows the Isolated Digital Inputs to be compatible with a wide range of controllers.


TABLE 4.1 24VDC Isolated Digital Input

24VDC Isolated Digital Input	
Logical LOW	0-1V
Logical HIGH	15-30V (24V Nominal)
Maximum Current	7mA @ 24V

When current flows into the digital input it is acting as a sinking input. When current flows out of the digital input it is acting as a sourcing input. Since current is allowed to flow in either direction, the inputs can either sink or source. The voltage at the Input Common pin determines whether the inputs sink or source. The Input Common pin is common to all of the inputs, but is isolated from the drive signal ground.


To configure the Isolated Digital Inputs as sinking, the 24V ground is applied to the Input Common and 24V is modulated at the digital input. [Figure 4.1](#) shows a sourcing output from the motion controller feeding the sinking input at the drive. In this example the controller uses a transistor to control the 24V to the drive input. A mechanical switch, relay or other voltage-controlling device can be used in place of the transistor.

FIGURE 4.1 24VDC Isolated Digital Input configured as a sinking input

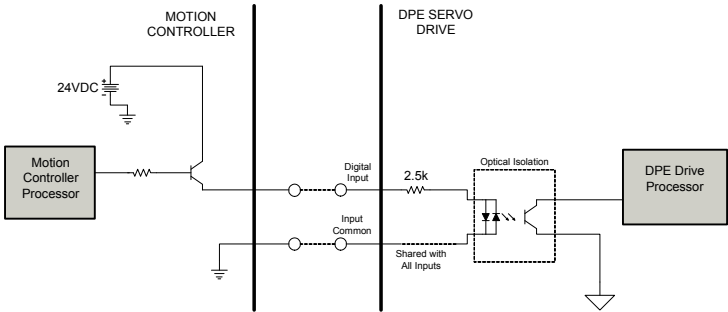

To configure the Isolated Digital Input as sourcing 24V is applied to the Input Common and the 24V ground is modulated at the digital input. [Figure 4.2](#) shows the 24V supply rearranged so it feeds into the Input Common pin. As in the previous example, other switching devices can control the inputs besides a transistor.

FIGURE 4.2 24VDC Isolated Digital Input configured as a sourcing input.

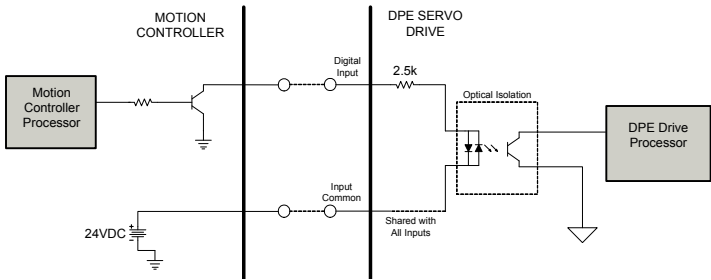


- **Outputs** - The Isolated Digital Outputs have a common grounding point labeled Output Common, and are +24VDC single-ended outputs.

TABLE 4.2 24VDC Isolated Digital Output

24VDC Isolated Digital Output (Sinking)	
Output Pull-Up Voltage	15-30V (24V nominal, supplied by user)
Logical LOW	0-2V
Logical HIGH	Same as Output Pull-Up Voltage
Maximum Current	120mA


TABLE 4.3

A transistor controls the voltage at each digital output. The output pin is pulled to 24V and the 24V ground goes to the output common, as shown in [Figure 4.3](#). A transistor controls the voltage at the digital output. When the transistor is open the voltage at the digital output is HIGH. When the transistor is closed the voltage is pulled to ground, which causes the output to go LOW.

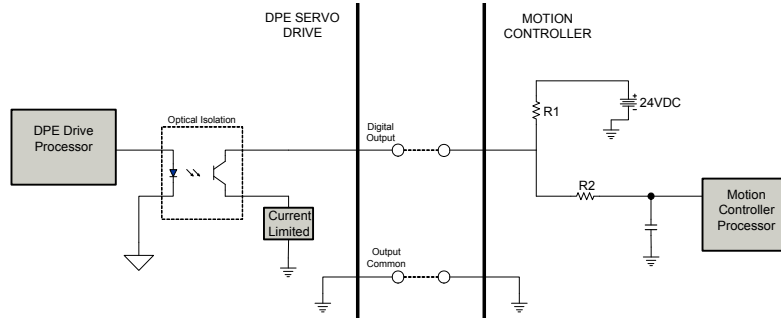


Auxiliary Encoder Input DPE drives accept a differential auxiliary encoder input that can be used for auxiliary position feedback, or for a command source when configured for Encoder Following. Hardware settings and options can be entered and configured in DriveWare.

DPE SERVO
DRIVE
+5V Encoder Supply Output

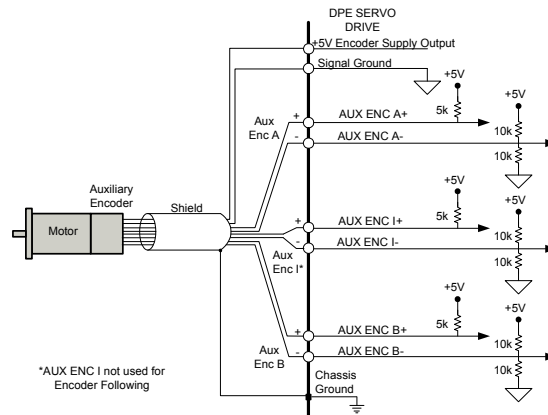


Programmable Analog I/O The Programmable Analog I/O can be assigned to drive functions in DriveWare. These can be used to monitor drive signals, and are also useful for troubleshooting unexpected drive behavior. The drive I/O Signal Connector provides a differential programmable analog input that may be used for a $\pm 10\text{V}$ analog input command.

DPE SERVO
DRIVE

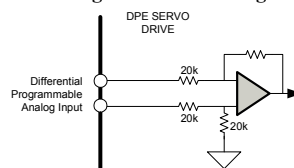

Motor Thermistor A 0-4 kohm thermistor or thermal switch can be connected between MOTOR THERMISTOR and GROUND. Thermistor/switch behavior can be configured in DriveWare.

E SERVO DRIVE DPE SERVO MOTOR

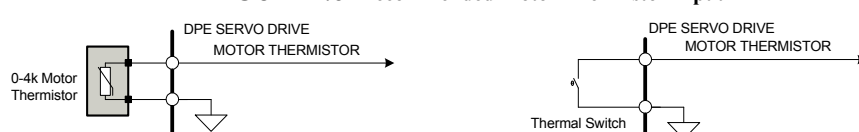


4.1.3 Feedback Operation

The functional operation of the feedback devices supported by DPE drives is described in this section. For more information on feedback selection, see [“Feedback Supported” on page 10](#). See the drive datasheet specific pin locations.


Absolute Encoder DPE drives support Hiperface®, EnDat® (2.1/2.2), or BiSS C-Mode absolute encoders. The drive Feedback Connector allows inputs for differential sine and cosine signals, as well as differential Reference Mark inputs and differential RS-485 Data and Clock signals. Hiperface® encoders require an external +12 VDC supply for power, while EnDat® and BiSS C encoders can use the +5V Encoder Supply Output pin provided on the DPE drive. For BiSS C-Mode and EnDat 2.2 encoders, only the Data and Clock inputs are used. The Sine, Cosine, and Index pins can be left open.

FIGURE 4.7 Absolute Encoder Connections

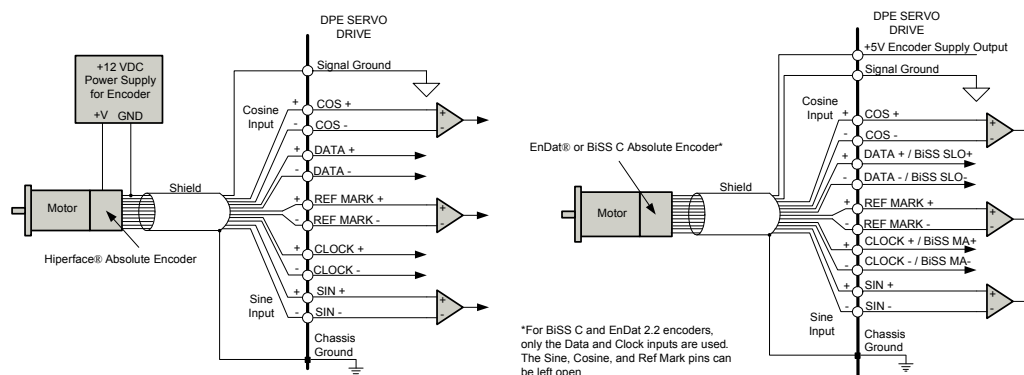


1 Vp-p Sin/Cos Encoder DPE drives support 1 Vp-p Sin/Cos Encoder feedback. The drive Feedback Connector allows inputs for differential sine and cosine signals, as well as differential Reference Mark inputs. A +5V Encoder Supply Output pin is provided to supply power to the encoder.

FIGURE 4.8 1 Vp-p Sin/Cos Encoder

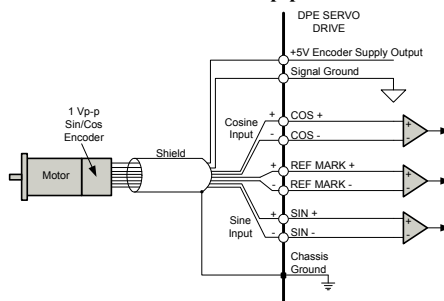


Incremental Encoder DPE drives support incremental encoder feedback. The drive Feedback Connector allows inputs for differential inputs only. Both the "A" and "B" channels of the encoder are required for operation. DPE drives also accept an optional differential "index" channel that can be used for synchronization and homing. A +5V Encoder Supply Output pin is provided to supply power to the encoder.

FIGURE 4.9 Incremental Encoder Connections

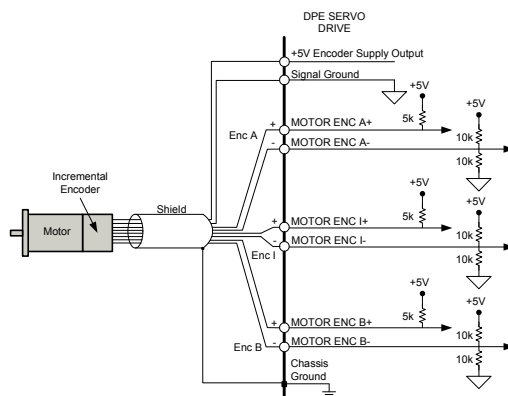


Hall Sensors DPE drives accept Hall Sensor feedback primarily for commutation, although they can also be used for velocity control. The drive Feedback Connector allows differential or single-ended Hall Sensor inputs. For single-ended Halls leave the negative terminals open.

FIGURE 4.10 Hall Sensor Input Connections

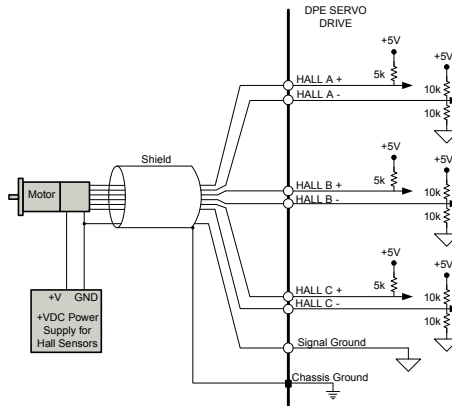

Tachometer (± 10 VDC) DPE drives support the use of a tachometer for velocity feedback. The Programmable Analog Input on the Auxiliary Feedback Connector is available for use with a tachometer. The tachometer signal is limited to ± 10 VDC.

FIGURE 4.11 Tachometer Input Connections

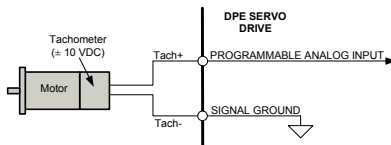


4.1.4 Power Supply Connections

The figures below show how an external power supply should be connected to the DPE drive.

AC or DC Power Modules For drive models designed for a three-phase AC power supply, connect the AC supply to L1, L2, and L3. On certain drive models, a single-phase AC supply can be connected to any two of the three (L1, L2, L3) AC terminals with the result that some drive power de-rating may occur. See Figure 4.12 below or the drive datasheet for the specific model characteristics. For drives designed for a single phase AC supply, connect the AC supply to the L1 and L2 (N) AC terminals for. Figure 4.12 below shows the recommended connections.


FIGURE 4.12 AC Power Supply Wiring

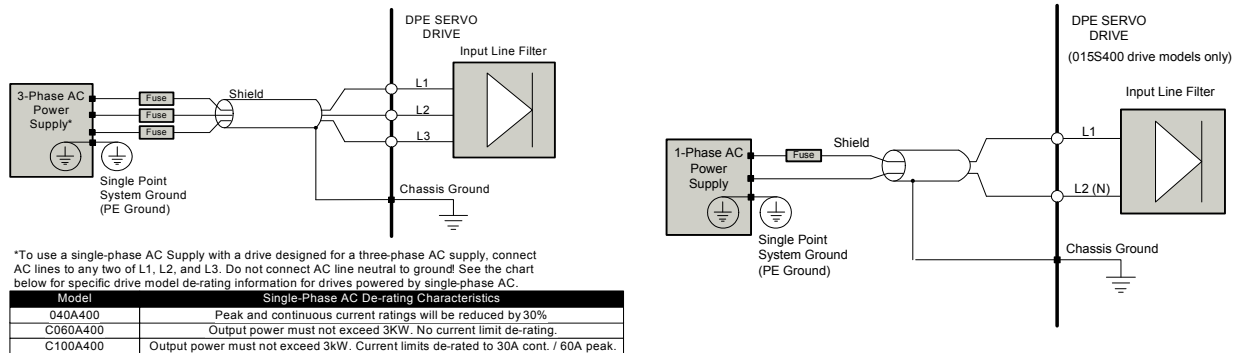

If using a DC supply to power a drive with an AC power module, follow one of the methods below, depending on the connections available for the specific power module (Figure 4.13 below shows the recommended connections).


- (Option A) Connect the isolated DC supply between any two of the three (L1, L2, L3) power terminals. Note that drives powered in this fashion must have peak and continuous current ratings reduced by at least 30% and should not be given current commands that exceed this derating.
- (Option B) Some drives feature DC+ and DC- terminals which can be used as DC inputs rather than using L1, L2, or L3. Except for 015S400 power modules, powering the drive in this fashion will require external inrush limiting circuitry that must be properly scaled to the application and drive power requirements.

FIGURE 4.13 AC Power Modules with DC Power Supply

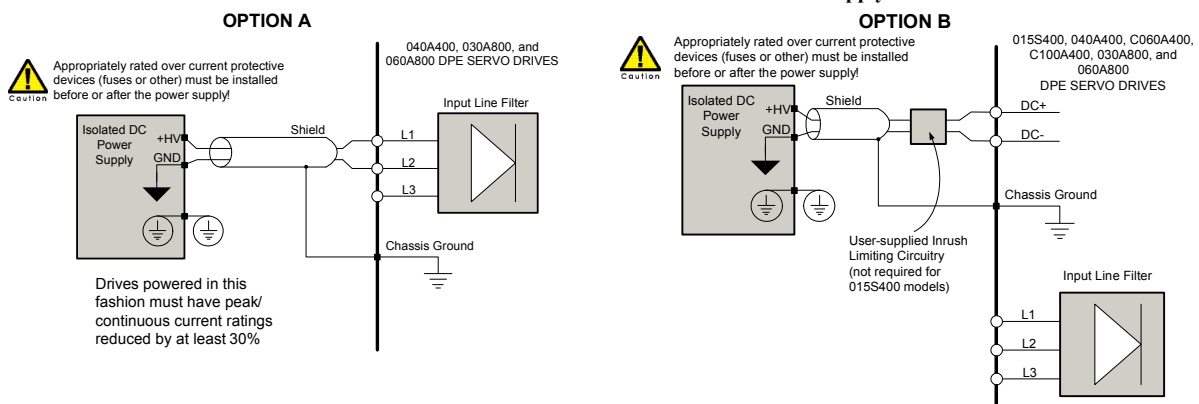

DC Only Power Modules For drives using a DC power module, connect the isolated DC supply high voltage to the DC Power Input terminal, and the DC supply ground to the power ground terminal, as shown in [Figure 4.14](#) below.

FIGURE 4.14 DC Power Module Supply Wiring

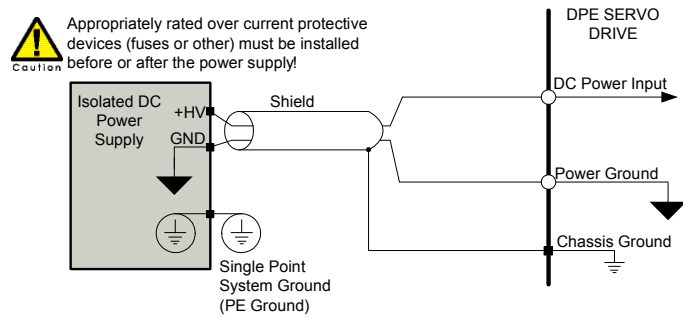

4.1.5 STO (Safe Torque Off)

Some models of the DPE drive family feature an external dedicated +24VDC STO safety function designed to monitor an external 24V STO input from the user system and disable the motor output during an STO event. The STO circuit uses +24VDC sinking single-ended isolated inputs for STO functionality. Both STO1 and STO2 must be active (HIGH) to allow torque output at the drive motor outputs.

TABLE 4.4 STO Signal Behavior

STO 1	STO 2	Motor Outputs	STO OUT
Active (HIGH)	Active (HIGH)	Enabled	Open
Active (HIGH)	Not Active (LOW)	Disabled	Closed
Not Active (LOW)	Active (HIGH)	Disabled	Closed
Not Active (LOW)	Not Active (LOW)	Disabled	Closed

The STO circuitry also features an STO status output (STO OUT) that signifies when an STO condition has occurred. This status is also viewable in the setup software as an indicator only. The STO OUT output functions as a switch. When an STO event occurs, the STO OUT switch becomes CLOSED. When the drive is in normal functional operation (STO 1 and STO 2 = 24V), the STO OUT switch is OPEN.


FIGURE 4.15 STO Connections

See the drive datasheet for a drawing and description of the physical STO connector and mating hardware. Functional Safety is TÜV Rheinland certified and meets requirements of the following standards:

- EN ISO 13849-1 -- Category 4 / PL e
- EN IEC 61800-5-2 -- STO (SIL 3)
- EN 62061 -- SIL CL3
- IEC 61508 -- SIL 3

The user must verify proper operation of the monitoring circuit (STO 1 and STO 2) at least once per month to maintain SIL 3, Cat 4 / PL e certification. The monitoring circuit is required to be examined by an external logic element when STO is incorporated into a complete drive system in order for proper diagnostics to be fully implemented and utilized in the FMEA calculation. The calculation of the safety relevant parameters are based on a proof test interval of one year and have shown that the requirements of up to SIL 3 are fulfilled. The safety relevant parameters are:

- Safe-Failure-Fraction: SFF = 97%
- Probability of a dangerous failure per hour: PFH = 1.3×10^{-8} 1/h
- Average probability of a dangerous failure on demand (1 year): $PFD_{avg} = 1.7 \times 10^{-5}$

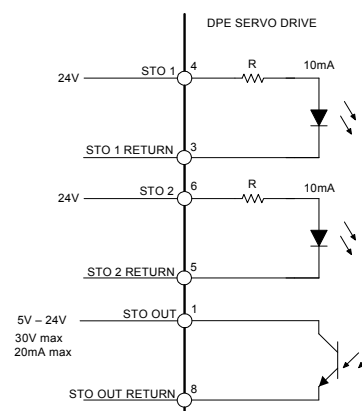


Note

The above assessment and safety values defined were assessed with the STO function incorporated into the DigiFlex Performance DPE drive family. Product data for the DPE drive family can be found by visiting www.a-m-c.com.

STO Disable For applications that do not require Safe Torque Off functionality, disabling of the STO feature is required for proper drive operation. A dedicated STO Disable Key connector is available for purchase and must be installed for applications where STO is not in use. Contact the factory for ordering information. Alternatively, STO may be disabled by installing the included mating connector for the STO connector, and wiring the designated pins together as given below in figure.

FIGURE 4.16 STO Disable Connections

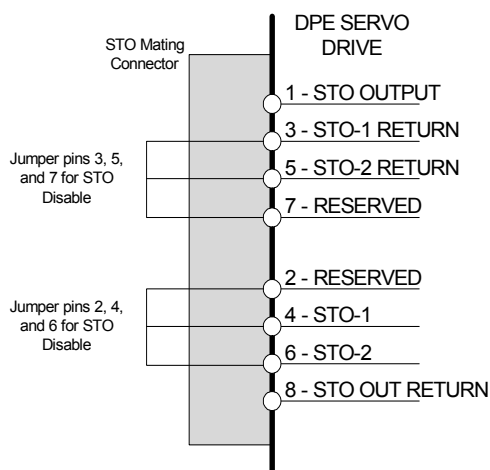

4.1.6 External Shunt Resistor Connections

Most AC powered DPE drives allow the option of connecting an external shunt resistor to protect against damage that may occur due to over-voltage. Drives that do not include an internal shunt resistor require an external shunt resistor for the internal shunt regulator to operate. The figures below show how an external shunt resistor should be connected to the drive for the different AC Power Modules. The internal shunt regulator must be enabled and configured in DriveWare in order to operate..

FIGURE 4.17 C060A400 Power Module External Shunt Resistor Connection

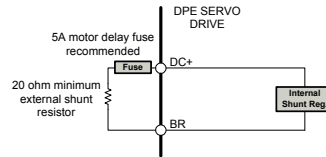


FIGURE 4.18 C100A400 Power Module External Shunt Resistor Connection

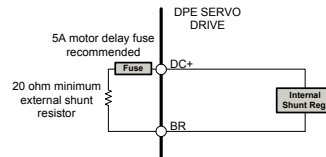


FIGURE 4.19 030A800 Power Module External Shunt Resistor Connection

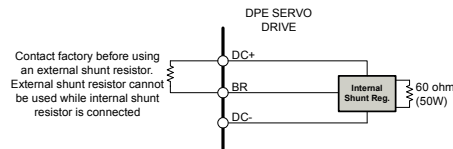


FIGURE 4.20 015S400, 040A400 and 060A800 Power Module External Shunt Resistor Connections




4.1.7 Logic Power Supply

For DPE drives using an external +24 VDC nominal logic power supply (850mA), the logic supply ground should be referenced to the drive signal ground. The logic power inputs are made through a separate Logic Power connector on the drive.

TABLE 4.5 AC Power Module Logic Supply Ratings

Logic Supply Range (VDC)	Input Current (mA)
20-30	850

FIGURE 4.21 Logic Power Supply Inputs

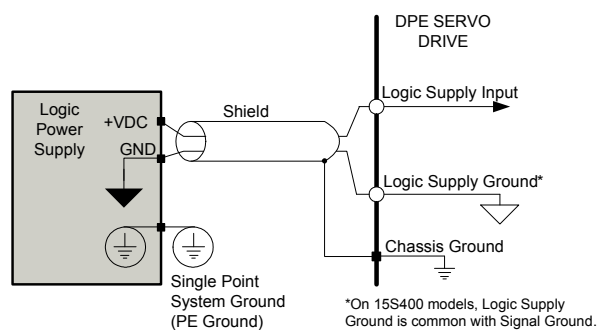


On drives using DC power modules, an external logic supply is optional. If no external logic supply is connected the drive will use the main DC power supply for logic power. If an external logic power supply is used, the voltage must be below the main DC Power Supply value. Table 4.6 shows the different DC power modules and their corresponding logic supply ranges.

TABLE 4.6 DC Power Module Logic Supply Ranges.

DC Power Module	Logic Supply Range (VDC)
020B080, 100B080	20-80


FIGURE 4.22 DC Power Module Logic Power Supply Inputs

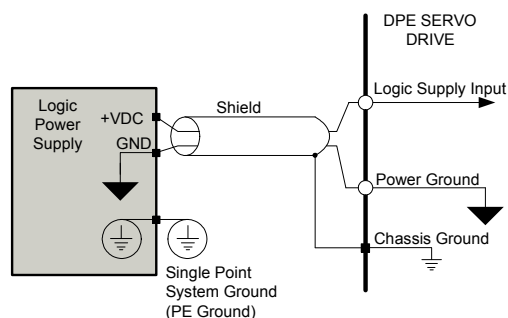

4.1.8 Motor Connections

The diagrams below show how a DPE drive connects to single phase and three phase motors. Notice that the motor wires are shielded, and that the motor housing is grounded to the single point system ground (PE Ground). The cable shield should be grounded at the drive side to chassis ground.

FIGURE 4.23 Motor Power Output Wiring

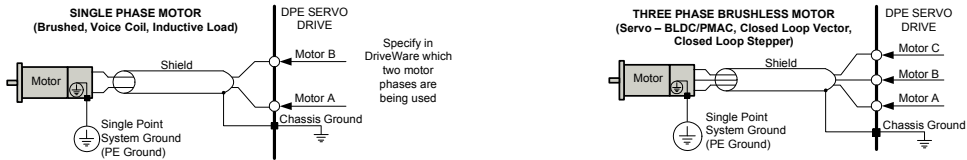

Caution

If using relays or other means to disconnect the motor leads, be sure the drive is disabled before reconnecting the motor leads to the drive. Connecting the motor leads to the drive while it is enabled can generate extremely high voltage spikes which will damage the drive.

4.1.9 Power LEDs Functionality

DPE drives feature LED status indicators for supply power and power bridge status.

Power LED The Power LED indicates whether power is being supplied to the drive, as well as shunt regulator operation.

Power LED	
State	Description
GREEN	Power is being supplied to the drive
OFF	No power is being supplied to the drive
RED	Drive is shunting excess energy through the shunt regulator (may appear as flashing RED/GREEN as the shunt regulator is turning off and on during regeneration)


Status LED The Status LED indicates whether the drive power bridge is enabled or disabled.

Status LED	
State	Description
GREEN	Power output bridge is enabled
RED	Power output bridge is disabled (via inhibit or fault)

4.1.10 Communication and Commissioning

DPE drives include an EtherCAT interface for networking and a USB interface for drive configuration and setup. A dual RJ-45 socket connector accepts standard CAT 5e or CAT 6 ethernet cables for the EtherCAT network connections.

FIGURE 4.24 EtherCAT Connectors

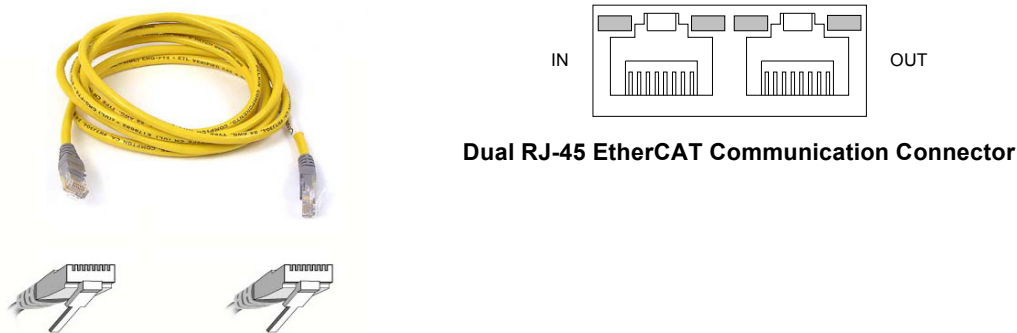


For drive commissioning, the DPE drive must be connected to a PC running ADVANCED Motion Controls DriveWare software. The mini type-b USB port on the DPE drive should be used with a STD-A to MINI-B USB cable for connection to a USB port on a PC.

FIGURE 4.25 USB Connectors




EtherCAT Station Alias DPE drives include two hexadecimal switches to assign the EtherCAT Station Alias. Note that drives on an EtherCAT network will be given an address automatically based on proximity to the host. Setting the switches manually is optional, and only necessary if a fixed address is required. Figure 4.26 shows the hexadecimal switch settings and the corresponding node ID.

FIGURE 4.26 EtherCAT Station Alias Hexadecimal Switches

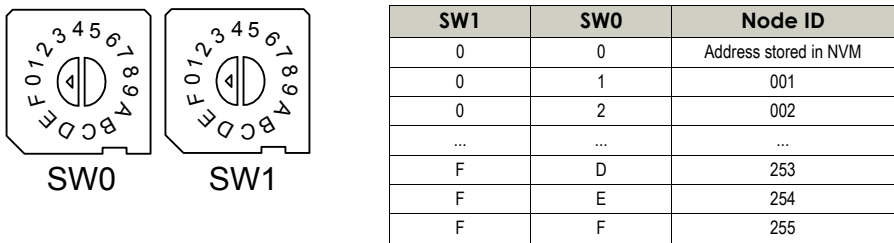

EtherCAT Communication LEDs Functionality The LINK/ACT, STATUS, and ERROR LEDs on the dual RJ-45 communication connector provide EtherCAT network status. Figure 4.27 shows the EtherCAT LED Locations, and Table 4.7 below describes typical LED functionality.

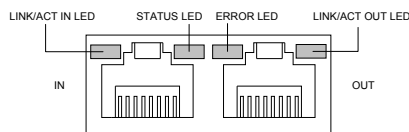FIGURE 4.27 EtherCAT LED Locations**TABLE 4.7 EtherCAT Communication LEDs Function Protocol**

LINK/ACT LED	
LED State	Description
Green - On	Valid Link - No Activity
Green - Flickering	Valid Link - Network Activity
Off	Invalid Link

STATUS LED	
LED State	Description
Green - On	The device is in the state OPERATIONAL
Green - Blinking (2.5Hz - 200ms on and 200ms off)	The device is in the state PRE-OPERATIONAL
Green - Single Flash (200ms flash followed by 1000ms off)	The device is in state SAFE-OPERATIONAL
Green - Flickering (10Hz - 50ms on and 50ms off)	The device is booting and has not yet entered the INIT state or The device is in state BOOTSTRAP or Firmware download operation in progress
Off	The device is in state INIT

ERROR LED		
LED State	Description	Example
Red - On	A PDI Watchdog Timeout has occurred.	Application controller is not responding anymore.
Red - Blinking (2.5Hz - 200ms on and 200ms off)	General Configuration Error.	State change commanded by master is impossible due to register or object settings.
Red - Flickering (10Hz - 50ms on and 50ms off)	Bootling Error was detected. INIT state reached, but parameter "Change" in the AL status register is set to 0x01:change/error.	Checksum Error in Flash Memory.
Red - Single Flash (200ms flash followed by 1000ms off)	The slave device application has changed the EtherCAT state autonomously; Parameter "Change" in the AL status register is set to 0x01:change/error.	Synchronization error; device enters SAFE-OPERATIONAL automatically
Red - Double Flash (Two 200ms flashes separated by 200ms off, followed by 1000ms off)	An Application Watchdog Timeout has occurred.	Sync Manager Watchdog Timeout.


4.1.11 Commutation

Motor commutation is the process that maintains an optimal angle between the magnetic field created by the permanent magnets in the motor and the electromagnetic field created by the currents running through the motor windings. This process ensures optimal torque or force generation at any motor position. Single phase (brushed) motors accomplish this process with internal commutators built into the motor housing. Three phase (brushless) motors require a correctly configured drive to commute properly, however.

See the DriveWare Software Guide for more information on AutoCommutation, Manual Commutation, and Phase Detect. DPE drives allow either sinusoidal or trapezoidal commutation.

Sinusoidal Commutation Sinusoidal commutation provides greater performance and efficiency than trapezoidal commutation. DPE drives can commute sinusoidally when connected to a motor-mounted encoder. Sinusoidal Commutation works by supplying current to each of the three motor phases smoothly in a sinusoidal pattern. The flow of current through each phase is shifted by 120 degrees. The sum of the current flowing through all three phases adds up to zero. [Figure 4.28](#) shows one electrical cycle of the motor phase currents.


FIGURE 4.28 Sinusoidal Commutation Motor Phase Currents

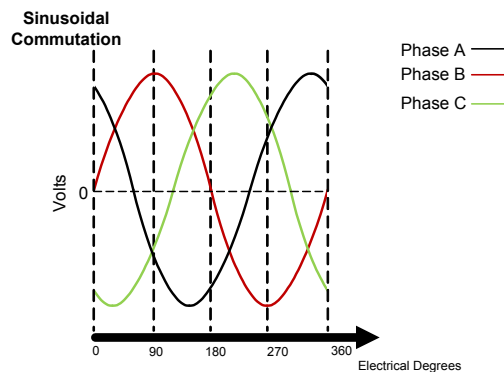

Trapezoidal Commutation Trapezoidal commutation is accomplished with the use of Hall Sensors on three phase (brushless) motors. DPE drives can commute trapezoidally when used with properly spaced Hall Sensors. Unlike sinusoidal commutation, current flows through only two motor phases at a time with trapezoidal commutation. The Hall Sensors each generate a square wave with a certain phase difference (either 120- or 60-degrees) over one electrical cycle of the motor. This results in six distinct Hall states for each electrical cycle. Depending on the motor pole count, there may be more than one electrical cycle per motor revolution. The number of electrical cycles in one motor revolution is equal to the number of motor poles divided by 2. For example:

- a 6-pole motor contains 3 electrical cycles per motor revolution
- a 4-pole motor contains 2 electrical cycles per motor revolution
- a 2-pole motor contains 1 electrical cycle per motor revolution

The drive powers two of the three motor phases with DC current during each specific Hall Sensor state as shown in [Figure 4.29](#).

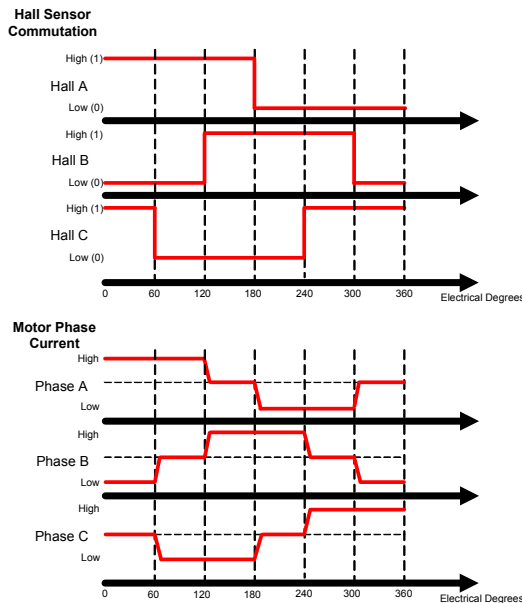FIGURE 4.29 Hall Sensor Commutation and Motor Phase Current for 120-Degree Phasing

Note: Not all *ADVANCED* Motion Controls' servo drive series use the same commutation logic. The commutation diagrams provided here should be used only with drives covered within this manual.

Table 4.8 shows the default commutation states for 120-degree and 60-degree phasing. Depending on the specific setup, the sequences may change after running Auto Commutation.

TABLE 4.8 Digital Drive Commutation Sequence Table

	60 Degree			120 Degree			Motor		
	Hall 1	Hall 2	Hall 3	Hall 1	Hall 2	Hall 3	Phase A	Phase B	Phase C
Valid	1	0	0	1	0	0	HIGH	-	LOW
	1	1	0	1	1	0	-	HIGH	LOW
	1	1	1	0	1	0	LOW	HIGH	-
	0	1	1	0	1	1	LOW	-	HIGH
	0	0	1	0	0	1	-	LOW	HIGH
	0	0	0	1	0	1	HIGH	LOW	-
Invalid	1	0	1	1	1	1	-	-	-
	0	1	0	0	0	0	-	-	-

4.1.12 Homing

DPE drives can be configured in DriveWare to "home" to a certain reference signal. This reference signal can be any number of different signal types, such as limit switches, home switches, or encoder index pulses. See the DriveWare Software Guide for more information on Homing.

4.1.13 Firmware

DPE drives are shipped with the latest version of firmware already stored in the drive. Periodic firmware updates are posted on *ADVANCED* Motion Controls' website, www.a-m-c.com. See the DriveWare Software Guide for information on how to check the drive's firmware version, and how to download new firmware into the drive when necessary.

A.1 Specifications Tables

TABLE A.1 Power Specifications - AC Power Modules

Description	Units	Power Specifications					
		0155400	040A400	C060A400	C100A400	030A800	060A800
Rated Voltage	VAC(VDC)	240 (339)	240 (339)	240 (339)	240 (339)	480 (678)	480 (678)
AC Supply Voltage Range	VAC	100-240	100-240	200-240	200-240	200-480	200-480
AC Supply Minimum	VAC	90	90	180	180	180	180
AC Supply Maximum	VAC	264	264	264	264	528	528
AC Input Phases	-	1	3	3	3	3	3
AC Supply Frequency	Hz	50-60	50-60	50-60	50-60	50-60	50-60
DC Supply Voltage Range	VDC	127-373	127-373	255-373	255-373	255-747	255-747
DC Bus Over Voltage Limit	VDC	394	394	420	420	850	850
DC Bus Under Voltage Limit	VDC	55	55	205	205	230	230
Maximum Peak Output Current	A (Arms)	15 (10.6)	40 (28.3)	60 (42.4)	100 (70.7)	30 (21.2)	60 (42.4)
Maximum Continuous Output Current	A (Arms)	7.5 (7.5)	20 (20)	30 (30)	50 (50)	15 (10.6)	30 (21.2)
Max. Continuous Output Power @ Rated Voltage ¹	W	2415	6441	9662	16103	6830	13650
Max. Continuous Power Dissipation @ Rated Voltage	W	127	339	509	848	360	720
Internal Bus Capacitance	μF	540	660	1120	1120	330	330
PWM Switching Frequency	kHz	20	20	14	10	10	10
External Shunt Resistor Minimum Resistance	Ω	25	25	20	20	note 2	40
Minimum Load Inductance (Line-To-Line)	μH	600	600	600	600	3000	3000

1. $P = (\text{DC Rated Voltage}) * (\text{Cont. RMS Current}) * 0.95$
2. Contact factory before using an external shunt resistor with this power module

TABLE A.2 Power Specifications - DC Power Modules

Description	Units	Power Specifications	
		020B080	100B080
DC Supply Voltage Range	VDC	20-80	20-80
DC Bus Over Voltage Limit	VDC	88	88
DC Bus Under Voltage Limit	VDC	17	17
Maximum Peak Output Current	A (Arms)	20 (14.1)	100 (70.73)
Maximum Continuous Output Current	A (Arms)	10 (10)	60 (60)
Max. Continuous Output Power @ Rated Voltage ¹	W	760	4560
Max. Continuous Power Dissipation @ Rated Voltage	W	40	240
Internal Bus Capacitance	μF	33	500
PWM Switching Frequency	kHz	20	20
Minimum Load Inductance (Line-To-Line)	μH	600	250

TABLE A.3 Control Specifications

Description		DPEANIU
Network Communication	EtherCAT (USB for Configuration)	
Command Sources	$\pm 10V$ Analog, Over the Network, Encoder Following, Sequencing, Indexing, Jogging	
Commutation Methods	Sinusoidal, Trapezoidal	
Control Modes	Profile Current, Profile Velocity, Profile Position, Cyclic Synchronous Current, Cyclic Synchronous Velocity, Cyclic Synchronous Position	
Motors Supported	Three Phase Brushless (Servo, Closed Loop Vector, Closed Loop Stepper), Single Phase (Brushed, Voice Coil, Inductive Load)	
Hardware Protection	40+ Configurable Functions, Over Current, Over Temperature (Drive & Motor), Over Voltage, Short Circuit (Phase-Phase & Phase-Ground), Under Voltage	
Programmable Digital I/O	11/7	
Programmable Analog I/O	2/0	
Primary I/O Logic Level	24 VDC	

TABLE A.4 Environmental Specifications

Environmental Specifications		Description
Parameter		
Humidity	90%, non-condensing	
Mechanical Shock	15g, 11ms, Half-sine	
Vibration	2 - 2000 Hz @ 2.5g	
Altitude	0-3000m	
Baseplate Maximum Allowable Temperature	0 - 75 °C	

TABLE A.5 Feedback Specifications

Feedback Specifications		Value
Parameter		
Maximum Incremental Encoder Input Frequency	20MHz (5 pre-quadrature)	
Maximum Sin/Cos Encoder Input Frequency	200kHz	
Maximum Hall Sensor Input Frequency	0.15 x PWM Switching Frequency	
Maximum Tachometer Voltage	$\pm 10VDC$	

TABLE A.6 24 VDC Digital I/O Specifications

24VDC Isolated Digital Input	
Logical LOW	0-1V
Logical HIGH	15-30V (24V Nominal)
Maximum Current	7mA @ 24V

24VDC Isolated Digital Output	
Output Pull-Up Voltage	15-30V (24V nominal, supplied by user)
Logical LOW	0-2V
Logical HIGH	Same as Output Pull-Up Voltage
Maximum Current	50mA sinking, 8mA sourcing

This section discusses how to ensure optimum performance and, if necessary, get assistance from the factory.

B.1 Fault Conditions and Symptoms

A fault condition can either be caused by a system parameter in excess of software or hardware limits, or by an event that has been user-configured to disable the drive upon occurrence.

To determine whether the drive is in a fault state, use the Drive Status function in DriveWare to view active and history event items and drive fault conditions. See the DriveWare Software Guide for more information on reading the Drive Status window. Some common fault conditions caused by hardware issues are listed below.

Over-Temperature Verify that the baseplate temperature is less than the drive Baseplate Temperature value. The drive remains disabled until the temperature at the drive baseplate falls below this threshold. See [“Ambient Temperature Range and Thermal Data” on page 17](#) or consult the drive datasheet for the allowable temperature range.

Over-Voltage Shutdown

1. Check the DC power supply voltage for a value above the drive over-voltage shutdown limit. If the DC bus voltage is above this limit, check the AC power line connected to the DC power supply for proper value.
2. Check the regenerative energy absorbed during deceleration. This is done by monitoring the DC bus voltage with a voltmeter or oscilloscope. If the DC bus voltage increases above the drive over-voltage shutdown limit during deceleration or regeneration, a shunt regulator may be necessary. See [“Power Supply Specifications” on page 16](#) for more information.

Under-Voltage Shutdown Verify power supply voltage for minimum conditions per specifications. Also note that the drive will pull the power supply voltage down if the power supply cannot provide the required current for the drive. This could occur when high current is demanded and the power supply is pulled below the minimum operating voltage required by the drive.

Short Circuit Fault

1. Check each motor lead for shorts with respect to motor housing, power ground, and also phase-to-phase. If the motor is shorted it will not rotate freely when no power is applied while it is uncoupled from the load.
2. Disconnect the motor leads to see if the drive will enable without the motor connected.
3. Measure motor armature resistance between motor leads with the drive disconnected.

Invalid Hall Sensor State See the "Commutation Sequence" table in ["Commutation" on page 47](#) for valid commutation states. If the drive is disabled check the following:

1. Check the voltage levels for all the Hall sensor inputs.
2. Make sure all Hall Sensor lines are connected properly.

B.1.1 Software Limits

Because DriveWare allows user configuration of many system parameters such as current, velocity, and position limits, as well as an associated "event action" for DriveWare to take when the system reaches this limit, it is possible for a drive to appear to be inoperative when in actuality it is simply in an assigned disable state.

For example, the motor velocity can be limited by giving a value to the Motor Over Speed selection in DriveWare. An "event action", such as "Disable the Power Bridge", can also be assigned for this particular limiting event for DriveWare to take if the motor reaches this speed. If the motor does happen to reach this velocity limit, DriveWare will automatically cut power to the drive's output in this particular case, and the drive will be disabled. In the Drive Status window, "Motor Over Speed" will be shown as a "history" event, and "Commanded Disable" will be shown as an "Action" event.

Depending on each specific system and application, there are many different options available for assigning system limits and associated actions. See the DriveWare Software Guide for more information.

B.1.2 Connection Problems

Connection problems are oftentimes caused by incorrect communication settings in DriveWare. Check all communications settings to be sure that the settings assigned in DriveWare are correct.

Faulty connection cables are also a possible cause of connection problems. Check all cables for any shorts or intermittent connections. Also check that all port hardware is properly installed and configured.


B.1.3 Overload

Verify that the minimum inductance requirement is met. If the inductance is too low it could appear like a short circuit to the drive and thus it might cause the short circuit fault to trip. Excessive heating of the drive and motor is also characteristic of the minimum inductance requirement not being met. See drive datasheets for minimum inductance requirements.

B.1.4 Current Limiting

All drives incorporate a “fold-back” circuit for protection against over-current. This “fold-back” circuit uses an approximate “ I^2t ” algorithm to protect the drive. All drives can run at peak current for a maximum of 2 seconds (each direction). Currents below this peak current but above the continuous current can be sustained for a longer time period, and the drive will automatically fold back at an approximate rate of “ I^2t ” to the continuous current limit within a time frame of less than 10 seconds. An over-current condition will not cause the drive to become disabled unless configured to do so in DriveWare.

FIGURE B.1 Peak Current Fold-Back

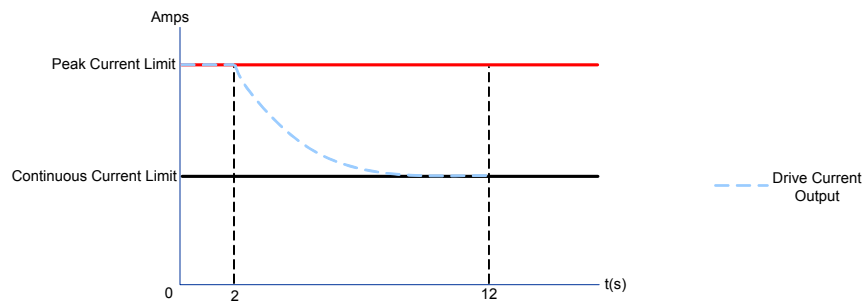

B.1.5 Motor Problems

A motor run-away condition is when the motor spins rapidly with no control from the command input. The most likely cause of this error comes from having the feedback element connected for positive feedback. This can be solved by changing the order that the feedback element lines are connected to the drive, or by using DriveWare to reverse the internal velocity feedback polarity setting.

Another common motor issue is when the motor spins faster in one direction than in the other. This is typically caused by improper motor commutation or poor loop tuning. Follow the steps in the DriveWare Software Guide to properly commutate and tune the motor.

B.1.6 Causes of Erratic Operation

- Improper grounding (i.e., drive signal ground is not connected to source signal ground).
- Noisy command signal. Check for system ground loops.
- Mechanical backlash, dead-band, slippage, etc.
- Excessive voltage spikes on bus.

B.2 Technical Support

For help from the manufacturer regarding drive set-up or operating problems, please gather the following information:


B.2.1 Drive Model Information

- DC bus voltage and range.
- Motor type, including inductance, torque constant, and winding resistance.
- Length and make-up of all wiring and cables.
- If brushless, include Hall sensor information.
- Type of controller, plus full description of feed back devices.
- Description of problem: instability, run-away, noise, over/under shoot, etc.
- Complete part number and serial number of the product. Original purchase order is helpful, but not necessary.

B.2.2 Product Label Description

The following is a typical example of a product label as it is found on the drive:

FIGURE B.2 Product Label

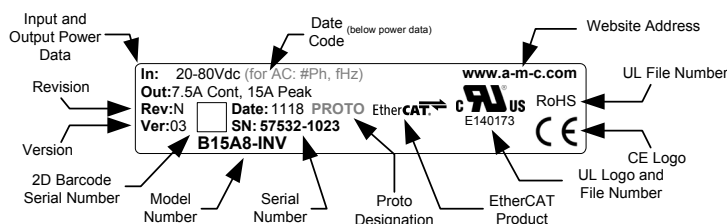

1. **Model Number:** This is the main product identifier. The model number can have a suffix designating a change from the base model.
2. **Revision Letter:** Product revision level letter ('A' is the earliest release from any model).
3. **Version:** The version number is used to track minor product upgrades with the same model number and revision letter ('01' is the earliest release of any revision).
4. **Proto Designation:** When included, indicates that the model is a prototype unit and model number will also begin with an 'X' designator.
5. **Serial Number:** The serial number consists of a 5-digit lot number followed by a 4-digit sequence number. Each product is assigned a unique serial number to track product life cycle history.
6. **Date Code:** The date code is a 4-digit number signifying the year and week of manufacture. The first two digits designate the year and the second two digits designate the week (e.g. the drive label shown would have been built in the year 2011 during the 18th week).
7. **Input and Output Power Data:** Includes basic power parameters of the product.

8. General Information: Displays applicable agency approvals, UL file reference number, compliance approvals, and EtherCAT capability. More complete product information is available by following the listed website.

B.2.3 Warranty Returns and Factory Help

Seller warrants that all items will be delivered free from defects in material and workmanship and in conformance with contractual requirements. The Seller makes no other warranties, express or implied and specifically NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

The Seller's exclusive liability for breach of warranty shall be limited to repairing or replacing at the Seller's option items returned to Seller's plant at Buyer's expense within one year of the date of delivery. The Seller's liability on any claim of any kind, including negligence, for loss or damage arising out of, connected with or resulting from this order, or from the performance or breach thereof or from the manufacture, sale, delivery, resale, repair or use of any item or services covered by or furnished under this order shall in no case exceed the price allocable to the item or service or part thereof which gives rise to the claim and in the event Seller fails to manufacture or deliver items other than standard products that appear in Seller's catalog. Seller's exclusive liability and Buyer's exclusive remedy shall be release of the Buyer from the obligation to pay the purchase price. IN NO EVENT SHALL THE SELLER BE LIABLE FOR SPECIAL OR CONSEQUENTIAL DAMAGES.

Buyer will take all appropriate measures to advise users and operators of the products delivered hereunder of all potential dangers to persons or property, which may be occasioned by such use. Buyer will indemnify and hold Seller harmless from all claims of any kind for injuries to persons and property arising from use of the products delivered hereunder. Buyer will, at its sole cost, carry liability insurance adequate to protect Buyer and Seller against such claims.

All returns (warranty or non-warranty) require that you first obtain a Return Material Authorization (RMA) number from the factory.

Request an RMA number by:

web	www.a-m-c.com/download/form/form_rma.html
telephone	(805) 389-1935
fax	(805) 389-1165

Numerics

10 V Analog Input	14
10 VDC Position Feedback	13
1Vp-p Sin/Cos Encoder	12, 36
24VDC Digital I/O	33

A

Absolute Encoder	11, 36
Agency Compliances	ii
Altitude	50
Auxiliary Encoder	14
Auxiliary Incremental Encoder	12

B

Baseplate Temperature Range	17
Block Diagrams	7

C

Capacitive Interference	23
Central Point Grounding	22
Command Sources	14
10V Analog	14
Encoder Following	14
Indexing and Sequencing	14
Jogging	14
Over the Network	14
Communication Protocol	8
Communication Settings	52
Commutation	47–48
Sinusoidal	47
Trapezoidal	47
Commutation Sequence Table	48
Company Website	ii
Connection Problems	52
Control Modes	9–10
Current (Torque)	9
Position	9
Velocity	9
Control Module	7
Crimp Tool	23
Current (Torque) Mode	9
Current Limiting	53

D

Differential Inputs	23
Digital I/O	
24VDC Digital I/O	33

Digital I/O Specifications	50
Drive Datasheet	4, 15
DriveWare	4, 31
Dwell Time	15

E

Electromagnetic Interference	23
Encoder	10
Encoder Following	14
Encoder Index	37
Encoder Index Pulses	48
Environment	17
Shock/Vibration	17
Ext. Shunt Resistor Connections	42
External Filter Card	16, 23

F

Fault Conditions	51–53
Invalid Hall Commutation	52
Over-Temperature	51
Over-Voltage Shutdown	51
Short Circuit Fault	52
Under-Voltage Shutdown	51
Feedback Operation	36
Feedback Polarity	10
Feedback Specifications	50
Feedback Supported	10–12
10 VDC Position	13
1Vp-p Sin/Cos Encoder	12
Absolute Encoder	11
Aux. Incremental Encoder	12
Hall Sensors	12
Incremental Encoder	10
Tachometer	13
Feedback Wires	24
Ferrite Suppression Cores	21
Firmware	48
Fold-back	53

G

Gearing Ratio	14
Ground Loops	22, 24
Grounding	22
Controller Chassis	22
DPC Drive Chassis	22
Drive Case	22
Motor Chassis	22
Power Supply Chassis	22

Shielding	22
-----------------	----

H

Hall Sensor Input Frequency	50
Hall Sensor Inputs	12
Hall Sensors	37
Home Switches	48
Homing	48
Humidity	17, 50

I

I/O and Signal Wires	25
Impedance	23
Incremental Encoder	10, 37
Indexing and Sequencing	14
Inductive Filter Cards	21
Input/Output Pin Functions	33–35
Analog I/O	35
Auxiliary Encoder	35
Digital I/O	33
Interference Coupling	23
Invalid Hall Commutation	52

J

Jogging	14
---------------	----

L

LED Functions	44
Limit Switches	48
Lock-out/tag-out Procedures	1
Logic Power Supply	43

M

Magnetic Interference	23
Mechanical Shock	50
Model Information	54
Model Mask	5
Motor "Run-Away"	10, 53
Motor Back EMF Constant	15
Motor Connections	44
Motor Current	15–16
Motor Inductance	3, 16
Overload	52
Motor Line-to-Line Resistance	16
Motor Problems	
Motor Run-Away	53
Motor Specifications	15

Motor Speed	15
Motor Torque Constant	15
Motor Voltage	15, 16
Motor Wires	24
Mounting	30
Move Profile	15, 17

N

Network Communication	14
Noise	23
Noise Suppression	25
Nominal Power Supply Voltage	16

O

Operation	31
Over the Network	14
Overload	52
Over-Temperature	17, 51
Over-Voltage Shutdown	51

P

Part Numbering Structure	5
PE Ground	22
Peak Current Fold-back	53
Position Feedback, 10 VDC	13
Position Mode	9
Positive Feedback	10
Power Ground	22
Power LED	44
Power Specifications	5, 49
Power Supply Capacitance	2, 24
Power Supply Connections	38

Power Supply Output Current	16
Power Supply Specifications	16
Power Supply Wires	24
Product Label	54
Products Covered	5
Protective Earth	22

R

Regeneration	16
Returns	55
Revision History	iii

S

Safety	1–3
Shielding	22, 23
Shock/Vibration	17
Short Circuit Fault	52
Shunt Regulator	16
Shunt Resistor Connections	42
Signal Ground	22
Sinusoidal Commutation	47
Software Limits	52
Space Vector Modulation	4
Specifications Check	15–17
Environment	17
Motor	15
Power Supply	16
Specifications Tables	49–50
Status LED	44
STO (Safe Torque Off)	40
System Requirements	15–17
System Voltage Requirement	15

T

Tachometer	13, 37
Technical Support	54
Temperature Ratings	17
Torque	15
Trapezoidal Commutation	47
Troubleshooting	51–55
Twisted Pair Wires	23

U

Under-Voltage Shutdown	51
------------------------------	----

V

Velocity Control	
Hall Sensors	12
Velocity Mode	9
Vibration	50
Voltage Drop Interference	23

W

Warranty Info	55
Warranty Returns	55
Wire Diameter	23
Wire Gauge	23
Wiring	23–25
Feedback Wires	24
I/O and Signal Wires	25
Impedance	23
Motor Wires	24
Power Supply Wires	24
Wire Gauge	23

DPE Digital Drives
Hardware Installation Manual
MNDGDEIN-08



3805 Calle Tecate • Camarillo, CA 93012-5068
Tel: (805) 389-1935 Fax: (805) 389-1165 www.a-m-c.com