




FIELD LOCATE
AND DRILL 5/16"Ø
HOLE IN THE
SUPPORT BEAM
TO INSTALL THE
HOLD DOWN
CLIP ASSY.

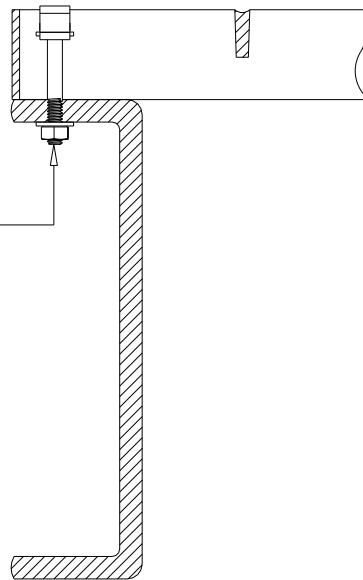

1/4"Øx2 1/4" Lg.
HEX HD. BOLT



M-2 SADDLE CLIP



1/4" FLAT WASHER



1/4" HEX NUT

