



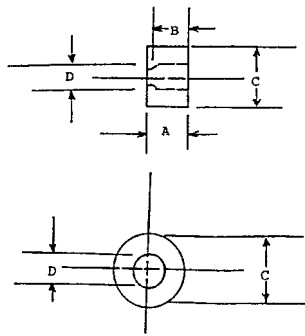

Reducer Bushing (flush) (Spg x S)


Inch Size	Part Number		mp	lbs. each	a	b	c	d
10 x 4	9837-623H		1	15	4 1/2	2 1/4	10 3/4	4 1/2
10 x 6	9837-626H		1	15	4 1/2	3 1/4	10 3/4	6 1/2
10 x 8	9837-628H		1	15	4 1/2	3 7/8	10 3/4	8 1/2
12 x 6	9837-666H		1	20	5 3/8	3 1/4	12 3/4	6 1/2
12 x 8	9837-668H		1	20	5 3/8	3 7/8	12 3/4	8 5/8
12 x 10	9837-670H		1	20	5 3/8	4 7/8	12 3/4	10 3/4

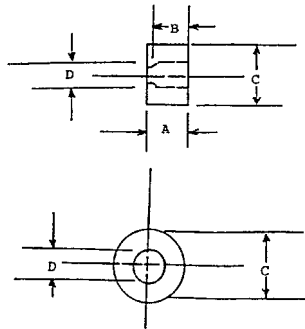


Reducer Bushing (flush) (Spg x FT)

Inch Size	Part Number		mp	lbs. each	a	b	c	d
10 x 6	9838-626H		1	15	4 1/2	2	10 3/4	6 1/2
10 x 8	9838-628H		1	15	4 1/2	2	10 3/4	8 1/2
12 x 8	9838-668H		1	20	5 3/8	2	12 3/4	8 5/8
12 x 10	9838-670H		1	20	5 3/8	2	12 3/4	10 3/4

Reducer Bushing Extended Style (Spg x S)




Inch Size	Part Number		mp	lbs. each	a	b	c	d	e
10 x 6	9840-626H		1	15	13	6	3 1/2	10 3/4	6 5/8
10 x 8	9840-628H		1	15	11 7/8	6	3 5/8	10 3/4	8 5/8
12 x 8	9840-668H		1	20	14 1/4	6 1/2	3 5/8	12 3/4	8 5/8
12 x 10	9840-670H		1	20	12	6 1/2	6	12 3/4	10 3/4

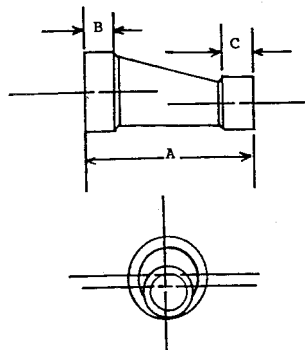

Eccentric Reducers (S x S)

Inch Size	Part Number		mp	lbs. each	a	b	c	
10 x 4	9841-623H		1	15	20 1/2	6	3 1/4	
10 x 6	9841-626H		1	15	21	6	3 1/2	
10 x 8	9841-628H		1	15	18	6	3 5/8	
12 x 6	9841-666H		1	20	24	6 1/2	3 1/2	
12 x 8	9841-668H		1	20	20	6 1/2	3 5/8	
12 x 10	9841-670H		1	20	23	6 1/2	6	

Caps (S)

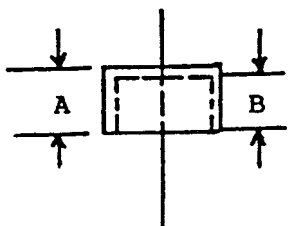

Inch Size	Part Number		mp	lbs. each	a	b		
10	9847-100H		1	20	6 3/4	6		
12	9847-120H		1	25	8	7		